

Rack Unit Labels - 2 Strips Included

RKUNITAPE


FR: Guide de l'utilisateur - fr.startech.com
 DE: Bedienungsanleitung - de.startech.com
 ES: Guía del usuario - es.startech.com
 NL: Gebruiksaanwijzing - nl.startech.com
 PT: Guia do usuário - pt.startech.com
 IT: Guida per l'uso - it.startech.com

Introduction

RKUNITAPE is designed to add unit markings to any server rack that doesn't have the markings due to design or wear. You can use the unit labels to manage the space in your server rack more effectively and to make sure that your rack-mountable equipment is properly aligned. The unit labels are each 49 rack units long, but you can cut them to fit properly in your server rack. The unit labels are easy to apply and, if necessary, you can reuse them.

For more information about rack units, see the "What is a U?" section.

Product diagram

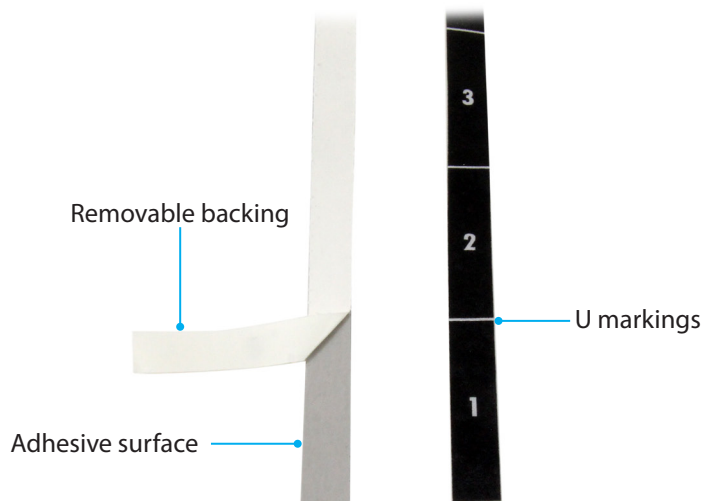

*actual product may vary from photos

Package contents

- 2 x rack-unit labels
- 1 x instruction manual

System requirements

- Server rack
- Isopropyl alcohol
- Scissors (if you need to cut the label)

System requirements are subject to change. For the latest requirements, please visit www.StarTech.com/RKUNITAPE.

Prepare the rack surface for application

Caution! The surface that you apply the unit labels to must be dry and free of contaminants. Otherwise, the adhesive won't stick to the surface.

1. To clean the surface, use isopropyl alcohol or a similar substance to remove any dirt or contaminants.
2. Dry the surface thoroughly.

Apply the unit label

Caution! The unit label has some stretch and flex to it. Make sure that you line up the label with the corresponding rack units as you apply the label.

1. Prepare the surface for application.
 2. If necessary, use scissors to cut the unit label to fit the server rack that you're using.
- Note:** Make sure that you cut the unit label along the U markings on the label.
3. Peel off a small section of the removable backing from the label.
 4. Place the exposed adhesive surface on the server rack, making sure to line up the U markings on the label with the server rack units.
 5. Apply firm and continuous pressure to the unit label and rack as you peel off the removable backing.

Remove the unit label

1. To remove the unit label from the server rack, grab one end of the label and carefully pull it off of the rack.
2. To clean the surface, use isopropyl alcohol or a similar substance to remove any dirt or contaminants.
3. If necessary, reapply the unit label to another server rack.

What is a U?

Server racks are classified by U size and depth. U is the standard unit of measurement used to designate the vertical usable space of a server rack, or the height of racks and cabinets. 1U is equal to 1.74 in. For example, if a rack is designated as 20U, it has 20 rack spaces for equipment and has 35 in. (20 times 1.75) of vertical usable space.

RKUNITAPE includes two unit labels that are each 49 rack units long.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit www.startech.com/downloads

Warranty Information

This product is backed by a two-year warranty.

StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.