


Mobile Media Center for Flat-Screen TV - One-Touch Height Adjustment

STNDMTV70

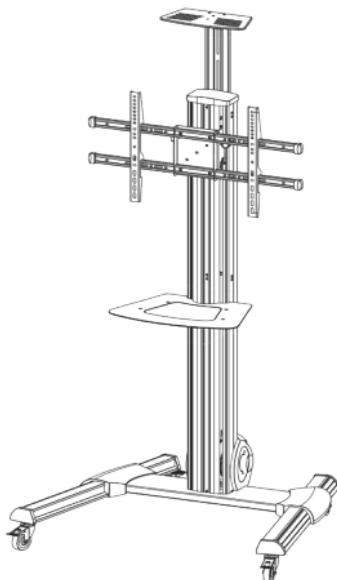

*actual product may vary from photos

FR: Guide de l'utilisateur - fr.startech.com

DE: Bedienungsanleitung - de.startech.com

ES: Guía del usuario - es.startech.com

NL: Gebruiksaanwijzing - nl.startech.com

PT: Guia do usuário - pt.startech.com

IT: Guida per l'uso - it.startech.com

For the latest information, technical specifications, and support for
this product, please visit www.StarTech.com/STNDMTV70.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Warning statements

Make sure that you assemble this product according to the instructions.

Read the entire manual and make sure that you understand the instructions before you start to assemble and use this product.

Do not exceed the weight capacity of this product. Overloading this product might result in injury or property damage.

Weight capacity of the multimedia shelf: 5 kg (11 lb)

Weight capacity of the camera shelf: 5 kg (11 lb)

Weight capacity of the TV mount: 40 kg (88 lb)

Lift capacity of the TV mount: 8 to 25 kg (18 to 55 lb)

Do not allow children to climb on this product, or use this product without proper supervision.

This product is intended for indoor use only and should not be used outdoors.

When you assemble this product, do not over-tighten the screws. If you encounter resistance when you are tightening the screws, stop tightening.

Assembling this product is a two-person task. Do not attempt to assemble this product and install equipment without assistance.

Before you add equipment to this product, make sure that you have properly assembled and installed it, and that the product can support the weight of the equipment that you are adding to it.

Make sure that you properly install all of your equipment before you start to adjust this product.

For safety reasons, when you add or remove equipment and change the weight of the mounted load, you need to follow the steps in the manual to readjust this product.

Stored energy hazard: The column in this product contains a lift mechanism that could move up quickly when you remove the loaded equipment. Before you remove equipment or make adjustments to the lift tension, move the display to the highest position on the column. Failure to do so could result in injury or property damage.

Tipping hazard: Do not move the cart while the display is in the highest position. Also, do not move the cart by pushing the display.

Do not move the cart over cords, cables, or uneven surfaces.

Before you start to move the cart, make sure that you unlock the casters.

Warningsmeddelanden

Se till att du monterar produkten i enlighet med instruktionerna.

Läs hela manualen och se till att du förstår instruktionerna innan du börjar montera och använda produkten.

Överskrid inte produkterns viktkapacitet. Överbelastning av produkten kan orsaka skada på person eller egendom.

Viktkapacitet multimedia hylla: 5 kg

Viktkapacitet kamera hylla: 5 kg

Viktkapacitet fäste för TV: 40 kg

Liftkapacitet fäste för TV: 8 till 25 kg

Låt inte barn klättra på produkten eller använda produkten utan uppsikt.

Produkten är endast avsedd för användning inomhus och ska inte användas utomhus.

Dra inte åt skruvarna för här när du monterar produkten. Om du måste ta i hårt du skruvar åt kan du sluta skruva åt.

Det krävs två personer för att montera produkten. Försök inte montera produkten och installera utrustning utan hjälp.

Innan du lägger till utrustning på produkten, se till att produkten är korrekt monterad, installerad och att produkten klarar av vikten på utrustningen som du lägger till.

Se till att all utrustning är korrekt installerad innan du börjar justera produkten.

För säkerhets skull måste du följa stegen i manualen för att justera om produkten när du lägger till eller tar bort utrustning och ändrar den belästade vikten.

Risk för lagrad energi! Kolumnen i detta produkt innehåller en lyftmekanism som kan åka upp snabbt om du tar bort utrustning. Innan du tar bort utrustning eller justerar lyftsättningen, flytta skärmen till högsta positionen på kolumnen. Om du inte gör det kan skada på person eller egendom uppstå.

Risk för vältning! Flytta inte vagnen medan skärmen är vid den högsta positionen. Flytta heller inte vagnen genom att trycka på skärmen.

Flytta inte vagnen över kablar eller öjärrna ytter.

Innan du börjar flytta på vagnen, se till att hjulen är uppplästa.

Waarschuwingen

Zorg dat u dit product volgens de instructies in elkaar zet.

Lees de gehele handleiding en zorg dat u de instructies begrijpt voordat u dit product in elkaar zet en gebruikt.

Overschrijd de maximale capaciteit van dit product niet. Overbelasting van dit product kan letsel of materiële schade veroorzaken.

Gewichtscapaciteit van het multimedia oppervlak: 5 kg

Gewichtscapaciteit van het bovenste oppervlak (voor camera): 5 kg

Gewichtscapaciteit van de schermbevestiging (voor televisie): 40 kg

Hefmogelijkheid van de schermbevestiging (voor televisie): 8 tot 25 kg

Geef kinderen geen toestemming om op dit apparaat te klimmen of dit product zonder goed toezicht

Instruction manual

te gebruiken.

Dit product is alleen bedoeld voor binnengebruik. U mag niet buiten worden gebruikt.

Draai de schroeven niet te strak wanneer u dit product in elkaar zet. Als u weerstand voelt tijdens het vastdraaien van de schroeven, stop dan.

Dit product moet met twee personen in elkaar worden gezet. Probeer dit product niet zonder hulp in elkaar te zetten en apparatuur te installeren.

Voordat u apparatuur aan dit product toevoegt, moet u ervoor zorgen dat u het op de juiste manier in elkaar hebt gezet en geïnstalleerd, en dat het product het gewicht van de toe te voegen apparatuur kan ondersteunen.

Zorg dat u de apparatuur goed installeert voordat u het aanpassen van dit product begint.

Om veiligheidsredenen, wanneer u apparatuur toevoegt of verwijderd en het gewicht van de gemonteerde last verandert, moet u de stappen die de handleiding volgen voor het aanpassen van dit product.

Gevaar van opgedoken energie! De kolumnen in dit product bevat een liftmechanisme dat snel omhoog zou kunnen bewegen wanneer u de aangebrachte apparatuur niet verwijderd. Voordat u apparatuur verwijderd of verplaatst, aanpassing aanbrengt of de liftmotoren, moet u het scherm naar de hoogste positie op de kolumnen verplaatsen. Anders zou lachamelijk letsel of materiële schade kunnen ontstaan.

Kantelgevaar! Verplaats de wagen niet terwijl het schema in de hoogste positie staat. Verplaats de wagen ook niet door tegen het schema te duwen.

Rijd de wagen niet over snoeren, kabels of ongelijke oppervlakken.

Voordat u de wagen gaat verplaatsen, moet u de zwenkwielden ontgrendelen.

注意

必ず取扱説明書に従って本製品の組み立てを行って下さい。

最初に取扱説明書を最後まで読み、本製品の組み立て方をすべて理解してから組み立て作業を始めて下さい。

本製品で定められた最大積載重量を超えないようにして下さい。最大積載重量をオーバーした場合、怪我をされたり器物破損の恐れがあります。

マルチメディア棚の総耐荷重:5kg

カメラ棚の総耐荷重:5kg

TVマウントの総耐荷重:40kg

TVマウントの総耐リフト:8~25kg

本製品に小さなお子様が乗って遊ばないようにして下さい。お子様が使用する際には、適切な監視を怠らないようにして下さい。

本製品は、室内での使用を想定しています。戸外では使用しないで下さい。

本製品を組み立てる際、ネジを締めすぎないようにして下さい。ネジを締めているうちに手応えを感じたら、締めるのを止めて下さい。

本製品は、二人がかりでの組み立てを想定しています。手助けなしに単独で組み立てと設置を行わないで下さい。

本製品に装置を積載する前に、組み立てと設置が適切に行われたか確認して下さい。また、積載する装置は重量と本製品が対応しているか確認して下さい。

本製品の調整を行う前に、すべての装置が適切に設置されているか確認して下さい。

安全性を考慮し、装置を脱する際、および積載負荷を変更する際には、取扱説明書の指示に従って本製品を再度調整して下さい。

反動注目! 本製品の支柱には、リフト構機が組み込まれており、反動した装置を取り外すと反動で急激に上昇する可能性があります。装置の取り外しやリフトのテンションを調整する前に、支柱の最も高い位置にモニタを移動させて下さい。この位置を怠るは怪我をする恐れや器物破損の恐れがあります。

転倒注意! モニタが一番高い位置にある状態でカートを動かさないで下さい。また、モニタを押してカートを動かすのはやめて下さい。

コードやケーブルの上、または凹凸のある床面でカートを移動させないで下さい。

カートを動かす前に、キャスターのロックが解除されているか確認して下さい。

Dichiarazioni di avvertenza

Assicurarsi di Assemblare il prodotto secondo le istruzioni.

Leggere l'intero manuale e assicurarsi di aver compreso tutte le istruzioni prima di iniziare ad assemblare e a utilizzare questo prodotto.

Non superare la capacità di carico del prodotto. Il sovraccarico del prodotto potrebbe causare danni o lesioni.

Portata massima del ripiano multimediale: 5 kg

Portata massima del ripiano per camera: 5 kg

Portata massima del supporto per TV: 40 kg

Portata massima del sollevamento support per TV: 8 a 25 kg

Non consentire ai bambini di arrampicarsi sul prodotto o di utilizzarlo senza un'adeguata supervisione.

Il prodotto è destinato all'uso in ambienti interni. Se ne consiglia l'impiego in ambienti esterni.

Durante l'assemblaggio del prodotto, non stringere troppo le viti. Se si incontra resistenza mentre si stringono le viti, interrompere l'operazione.

L'assemblaggio di questo prodotto richiede la presenza di due persone. Non tentare di assemblare il prodotto e installare le apparecchiature senza assistenza.

Prima di aggiungere altre apparecchiature al prodotto, assicurarsi di averlo assemblato e installato correttamente e che sia in grado di sostenere il peso dell'apparecchiatura in questione.

Assicurarsi di aver installato correttamente tutte le apparecchiature prima di procedere alla regolazione del prodotto.

Per motivi di sicurezza, quando si aggiungono o si rimuovono apparecchiature e varia il peso del carico sul supporto, è necessario attenersi alla procedura descritta nel manuale per regolare di nuovo il prodotto.

Pericolo di energia accumulata! La colonna di questo prodotto include un meccanismo di sollevamento che puote subir rapidamente versi di tensione se si rimuove l'apparecchiatura caricata. Prima di rimuovere l'apparecchiatura o di regolare la tensione di sollevamento, spostare il display nella posizione più elevata sulla colonna. L'insorveanza di questa indicazione potrebbe causare danni o lesioni.

Pericolo di ribaltamento! Non spostare il carrello mentre il display è nella posizione più elevata. E non spostarlo spingendo il display.

Non far passare il carrello sopra corde, cavi o superfici irregolari.

Prima di procedere allo spostamento del carrello, verificare di aver sbloccato le rotelle.

Avertissements

Assemblez ce produit conformément aux instructions.

Lisez tout le manuel et assurez-vous que vous comprenez les instructions avant de commencer à assembler et utiliser ce produit.

Ne dépassez pas la capacité pondérale du produit. Une surcharge du produit peut entraîner des blessures ou des dommages matériels.

Capacité de poids de l'étagère multimédia : 5 kg

Capacité de poids de l'étagère pour caméra : 5 kg

Capacité de poids du support d'écran : 40 kg

Capacité de ascenseur poids du support d'écran : 8 à 25 kg

N'autorisez pas les enfants à grimper sur ce produit ni à l'utiliser sans surveillance.

Ce produit est uniquement destiné à une utilisation en intérieur et ne doit pas être utilisé à l'extérieur.

Ne serrez pas trop les vis lors de l'assemblage de ce produit. Si vous rencontrez une résistance lors du serrage des vis, cessez de serrer.

L'assemblage de ce produit nécessite deux personnes. Ne tentez pas d'assembler le produit et d'installer les équipements sans aide.

Avant d'ajouter des équipements au produit, vérifiez que vous l'avez correctement assemblé et installé, et que le produit peut supporter le poids des équipements que vous y ajoutez.

Veillez à installer correctement tous les équipements avant de commencer à ajuster le produit.

Pour des raisons de sécurité, lorsque vous ajoutez ou retirez des équipements et modifiez le poids de la charge montante, vous devez suivre la procédure indiquée dans le manuel pour réajuster le produit.

Risque d'émprise emmagasinée! La colonna di questo prodotto contiene un meccanismo de levage susceptible de se relever rapidamente lorsque vous retirez les équipements montés. Avant de retirer des équipements ou d'ajuster la tension de levage, placez l'écran à la position la plus élevée sur la colonne. Si vous ne respectez pas ces instructions, vous risquez de vous blesser ou d'endommager l'équipement.

Risque de basculement! Ne déplacez pas le meuble lorsque l'écran est à la position la plus élevée. Ne déplacez pas non plus le meuble en poussant sur l'écran.

Ne faites pas rouler le meuble sur des cordes, des câbles ou des surfaces inégales.

Avant de déplacer le meuble, veiller à débloquer les roulettes.

Mensagens de aviso

Certifique-se de que monta este produto de acordo com as instruções.

Leia todo o manual e certifique-se de que entende as instruções antes de começar a montar e a utilizar este produto.

Não exceda a capacidade de peso deste produto. Sobrecarregar este produto pode resultar em ferimentos ou danos de propriedade.

Capacidade de carga da bandeja multimídia: 5 kg

Capacidade de carga da bandeja de câmera: 5 kg

Capacidade de carga de suporte para TV: 40 kg

Capacidade de lift de suporte para TV: 8 a 25 kg

Não deixar as crianças trepar neste produto ou utilizar este produto sem a devida supervisão.

Este produto destina-se apenas a uma utilização no interior e não deve ser utilizado no exterior.

Quando montar este produto, não aperte demasiado os parafusos. Se encontrar resistência enquanto aperta os parafusos, pare de apertar.

Montar este produto é uma tarefa para duas pessoas. Não tentar montar este produto e instalar o equipamento sem assistência.

Antes de adicionar o equipamento a este produto, certifique-se de que o montou e instalou devidamente e de que o produto pode suportar o peso do equipamento que está a adicionar ao mesmo.

Certifique-se de que instala devidamente todo o seu equipamento antes de começar a ajustar este produto.

Por motivos de segurança, quando adicionar ou remover equipamento e mudar o peso da carga montada, precisa de seguir os passos no manual para reajustar este produto.

Perigo de energia armazenada! A coluna neste produto contém um mecanismo de elevação que pode mover rapidamente quando remover o equipamento descarregado. Antes de remover equipamento ou fazer ajustes na tensão de elevação, mover o ecrã para a posição mais alta na coluna. O incumprimento destas instruções pode resultar em ferimentos ou danos de propriedade.

Perigo de queda! Não mover o carro enquanto o ecrã está na posição mais alta. Além disso, não mover o carro empurrando o visor.

Não mover o carro pelos fios, cabos ou superfícies irregulares.

Antes de começar a mover o carro, certifique-se de que desbloqueia os rodizios.

Perigo de energia armazenada! A coluna neste produto contém um mecanismo de elevação que pode mover rapidamente quando remover o equipamento descarregado. Antes de remover equipamento ou fazer ajustes na tensão de elevação, mover o ecrã para a posição mais alta na coluna. O incumprimento destas instruções pode resultar em ferimentos ou danos de propriedade.

Perigo de queda! Não mover o carro enquanto o ecrã está na posição mais alta. Além disso, não mover o carro empurrando o visor.

Não mover o carro pelos fios, cabos ou superfícies irregulares.

Antes de começar a mover o carro, certifique-se de que desbloqueia os rodizios.

Advertencias de uso

Asegúrese de ensamblar este producto según las instrucciones.

Lea todo el manual y asegúrese de haber comprendido bien las instrucciones antes de proceder con el ensamblaje y el uso de este producto.

Asegúrese de no exceder la capacidad de peso de este producto. La sobrecarga de este producto puede causar lesiones personales o daños en la propiedad.

Capacidad de carga del estante multimedia: 5 kg

Capacidad de carga del estante de la cámara: 5 kg

Capacidad de carga del soporte de TV: 40 kg

Capacidad de ascensor del soporte de TV: 8 a 25 kg

No permita que los niños se suban a este producto o que lo utilicen sin la debida supervisión de un adulto.

El uso de este producto es solo para interiores y no debe utilizarse en exteriores.

Cuando ensamble este producto, no apriete los tornillos más de lo debido. Si al apretar los tornillos siente resistencia, no los apriete más.

Se requieren dos personas para el ensamblaje de este producto. No intente ensamblar este producto e instalar otros equipos en la debida asistencia de otra persona.

Antes de instalar equipos en este producto, asegúrese de haberlo ensamblado correctamente, a fin de que pueda soportar el peso del equipo que vaya a instalar.

Asegúrese de que ha instalado todo el equipo correctamente antes de efectuar ajustes de este producto.

Por motivos de seguridad, cuando instale o desinstale equipos y esto afecte al peso de la carga instalada, debe seguir los pasos indicados en el manual para reajustar este producto.

Perigo de acumulación de energía! La coluna de este producto incluye un mecanismo de elevación que puede subir rápidamente cuando desinstala un equipo. Antes de desinstalar un equipo o efectuar la tensión de elevación, mueva el monitor hasta la posición más alta de la columna. De lo contrario, pueden producirse lesiones personales o daños en la propiedad.

Perigo de vuelco! No desplace el carrito mientras el monitor esté en la posición más alta. Asimismo, no desplace el carrito empujando el monitor.

No desplace el carrito encima de cables o superficies desniveladas.

Antes de empezar a mover el carrito, asegúrese de haber desbloqueado las ruedas. Antes de empezar a mover el carrito, asegúrese de haber desbloqueado las ruedas.

Warnhinweise

Beachten Sie bei der Montage dieses Produkts die Montageanweisungen.

Bevor Sie dieses Produkt montieren und verwenden, lesen Sie das gesamte Handbuch und vergewissern Sie sich, dass Sie die Anweisungen verstanden haben.

Überschreiten Sie nicht die Traglast dieses Produkts. Ein Überladen dieses Produkts kann zu Verletzungen oder zur Beschädigung des Produkts führen.

Gewichtskapazität des Multimedia Fachbodens: 5 kg

Gewichtskapazität des Kameras Fachbodens: 5 kg

Gewichtskapazität der TV Halterung: 40 kg

Aufzugskapazität der TV Halterung: 8 bis 25 kg

Gestatten Sie Kindern nicht, auf das Produkt zu klettern oder das Produkt ohne Aufsicht zu benutzen.

Dieses Produkt ist nur zum Gebrauch in Innenräumen vorgesehen und sollte nicht im Freien verwendet werden.

Achten Sie bei der Montage des Produkts darauf, die Schrauben nicht zu fest anzuziehen. Sobald Sie beim Anziehen der Schrauben auf Widerstand stoßen, stellen Sie das Anziehen ein.

Die Montage dieses Produkts ist auf die Ausführung von zwei Personen ausgelegt. Versuchen Sie nicht ohne Hilfe, dieses Produkt zu montieren und Geräte zu installieren.

Bevor Sie Geräte zu diesem Produkt hinzufügen, vergewissern Sie sich, dass Sie es ordnungsgemäß montiert und installiert haben und dass das Produkt das Gewicht der Geräte, die Sie hinzufügen möchten, tragen kann.

Sorgen Sie dafür, dass all Ihre Geräte ordentlich installiert sind, bevor Sie dieses Produkt justieren.

Befolgen Sie aus Sicherheitsgründen die im Benutzerhandbuch beschriebenen Schritte zur Neujustierung des Produkts, wenn Sie Geräte hinzufügen oder entfernen und somit die Traglast verändern.

Gefährdung durch gespeicherte Energie! Die Sitzstange dieses Produkts enthält einen Hubmechanismus, der sich bei Entfernung der enthaltenen Schraube schnell nach oben bewegen kann. Bringen Sie das Display in die höchste Position der Stütze, bevor Sie Geräte entnehmen oder die Hublast verändern. Andernfalls kann es zu Verletzungen oder zur Beschädigung des Produkts kommen.

Kippgefahr! Bewegen Sie den Wagen nicht, wenn sich das Display in der höchsten Position befindet. Bewegen Sie zudem den Wagen nicht durch Drücken auf das Display.

Bewegen Sie den Wagen nicht über Leitungen, Kabel oder unebenes Gelände.

Stellen Sie sicher, dass die Rollen entriegelt sind, bevor Sie den Wagen in Bewegung setzen.

Table of Contents

Warnings	i
Introduction	1
Product dimensions	1
Product diagram.....	2
Technical specifications	3
Package contents	4
Requirements	10
Assembly.....	11
Assemble the base.....	11
Adjust the height of the casters.....	12
Attach the column to the base.....	13
Assemble the TV mount	16
Attach the support plate to the column.....	17
Move the support plate to the lowest position	19
Attach the adapter brackets to a flush mounting surface	21
Attach the adapter brackets to a recessed mounting surface.....	23
Attach the TV to the column	26
Counterbalance the weight of the TV.....	29
Attach the plastic cover	30
Attach the cable clips	32
Install the multimedia shelf.....	33
Attach the camera shelf.....	36
Attach the wrench	38


Adjusting the STNDMTV70.....	39
Change the orientation of the TV.....	39
Adjust the angle of the TV	40
Adjust the height of the multimedia shelf.....	41
Adjust the height of the camera shelf.....	42
Lock the vertical position of the TV	43
Technical support.....	44
Warranty information	44

Introduction


Product dimensions

Support plate rotation: 0° to +90°

TV tilt: +5° to -12°

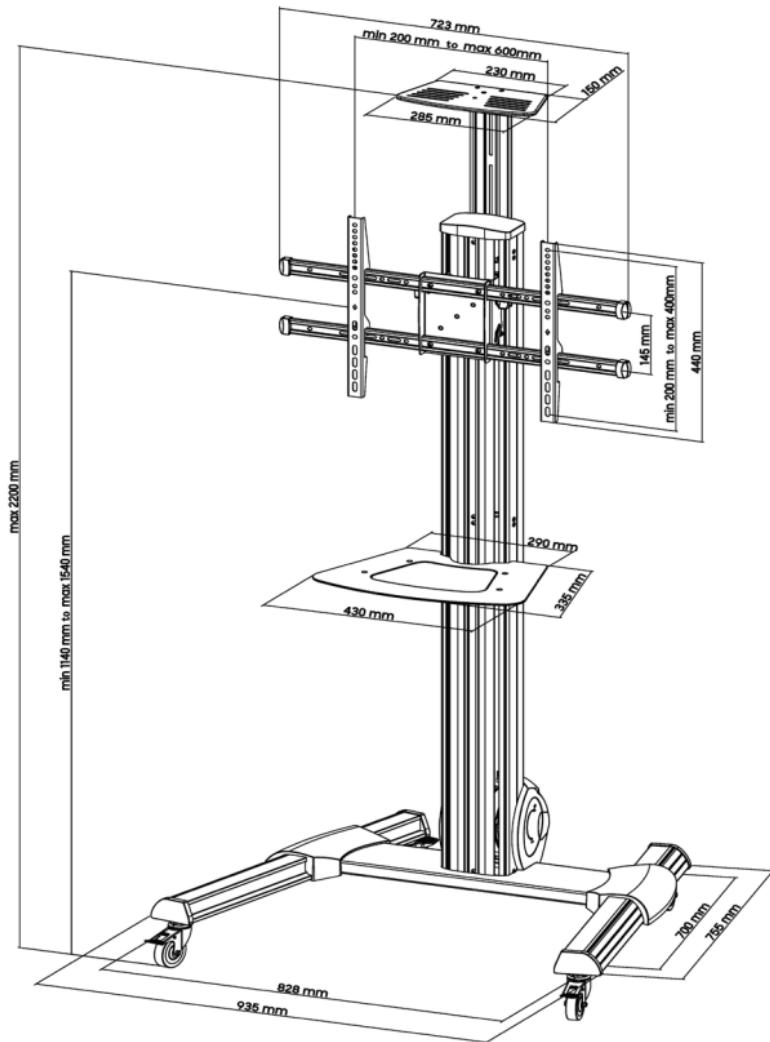

Product diagram

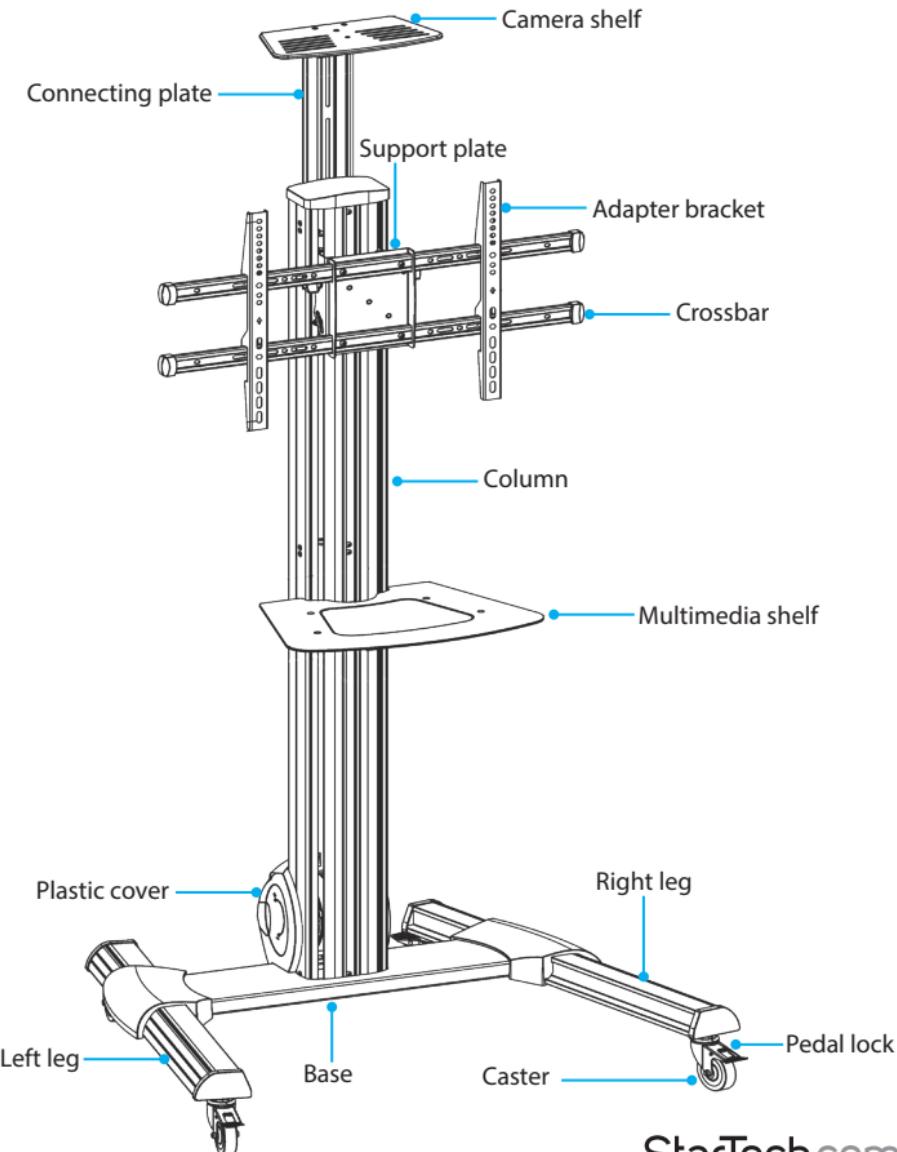

Technical specifications

Unless otherwise indicated, the technical specifications in the table below apply to the TV.

Type of measurement	Measurement												
VESA mounting hole pattern on the TV mount	<table><tbody><tr><td>200x200</td><td>400x300</td></tr><tr><td>200x300</td><td>400x400</td></tr><tr><td>200x400</td><td>600x200</td></tr><tr><td>300x200</td><td>600x300</td></tr><tr><td>300x300</td><td>600x400</td></tr><tr><td>400x200</td><td></td></tr></tbody></table>	200x200	400x300	200x300	400x400	200x400	600x200	300x200	600x300	300x300	600x400	400x200	
200x200	400x300												
200x300	400x400												
200x400	600x200												
300x200	600x300												
300x300	600x400												
400x200													
Weight capacity of TV mount	40 kg (88 lb.)												
Lift capacity of TV mount	8 to 25 kg (18 to 55 lb.) Note: If you exceed the lift capacity, you will require additional manual force to raise the TV.												
Weight capacity of multimedia shelf	5 kg (11 lb.)												
Weight capacity of camera shelf	5 kg (11 lb.)												
Screen size	32" to 75"												

Package contents

1



Base

Qty: One

2



Left leg

Qty: One

3



Right leg

Qty: One

4



Left base cover

Qty: One

5



Right base cover

Qty: One

6



Left support bracket

Qty: One

7



Right support bracket

Qty: One

8



Column cover

Qty: One

9



Column

Qty: One

10



Multimedia shelf

Qty: One

11



Camera shelf

Qty: One


12



Connecting plate

Qty: One

13

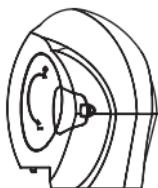

Plastic cover

Qty: One

14



Cable clips

Qty: Three

15



Adapter brackets

Qty: Two

16



Crossbars

Qty: Two


17



End caps

Qty: Four

18

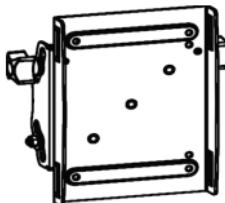

Support plate

Qty: One


19



Wrench

Qty: One

20

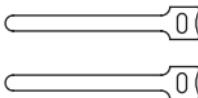

Hook-and-loop ties

Qty: Two

21



M6x16 mm screws

Qty: Four

22



M6x25 mm screws

Qty: Two

23



Support plate nuts

Qty: Two

24



Countersunk screws

Qty: Three

25



M4x6 mm screws

Qty: Two

26



M6x8 mm screws

Qty: Six


27



M6x14 mm screws

Qty: Ten

28

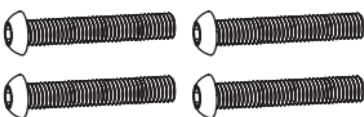

M8x25 mm screws

Qty: Four

29



Washers

Qty: Four

30



Shelf spacers

Qty: Four

31



Hex key

Qty: One

32



Caster wrench

Qty: One

33



M5x14 mm screws

Qty: Four


34



M6x14 mm screws

Qty: Four


35

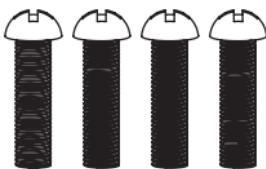

M6x30 mm screws

Qty: Four


36

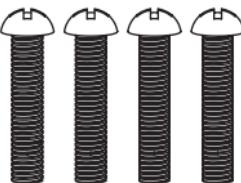

M8x30 mm screws

Qty: Four


37

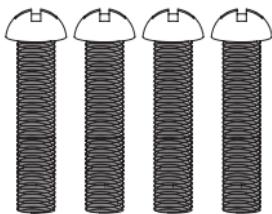

M8x50 mm screws

Qty: Four


38

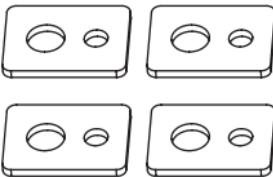

TV washers

Qty: Four


39

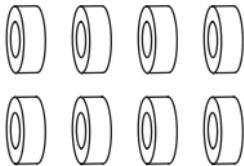

Small spacers

Qty: Eight

40

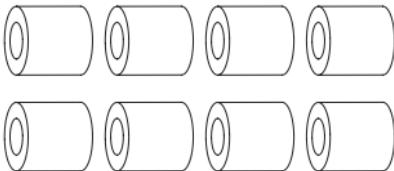

Large spacers

Qty: Eight

41



Instruction manual

Qty: One

Requirements

- A TV compatible with the following VESA mounting holes patterns: 200x200, 200x300, 200x400, 300x200, 300x300, 400x200, 400x300, 400x400, 600x200, 600x300, 600x400
- A Phillips™ type screwdriver

Requirements are subject to change. For the latest requirements, please visit www.StarTech.com/STNDMTV70.

Instruction manual


Assembly

Warning! Assembling this product requires multiple people. DO NOT attempt to assemble this product and install equipment without assistance.

Assemble the base

1. Insert the base into the left leg, aligning the holes in the base with the holes in the left leg.
2. Insert two M6x16 mm screws through the left leg and into the base.
3. Use the hex key to tighten the M6x16 mm screws.
4. Repeat steps 1 to 3 to attach the right leg. (figure 1)

figure 1

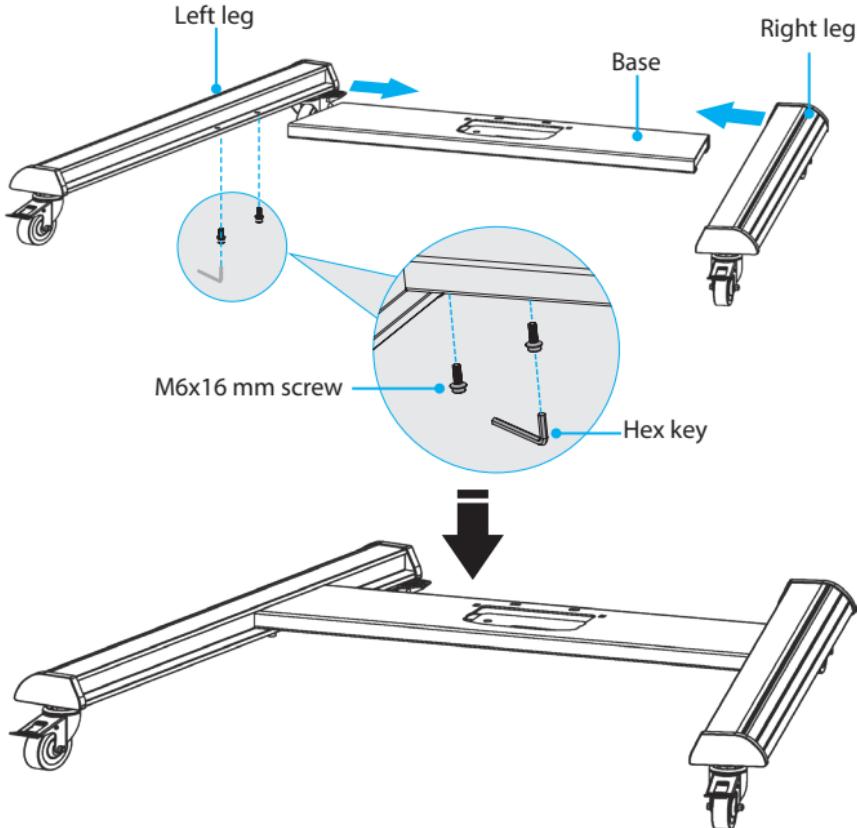


Adjust the height of the casters

You can adjust the height of each of the four casters so that the casters are balanced and the assembly doesn't rock.

1. Use the caster wrench to loosen the nuts above the casters.
2. Rotate the casters counterclockwise or clockwise to raise or lower the casters to the desired height.
3. Use the caster wrench to tighten the nuts. (figure 2)


figure 2

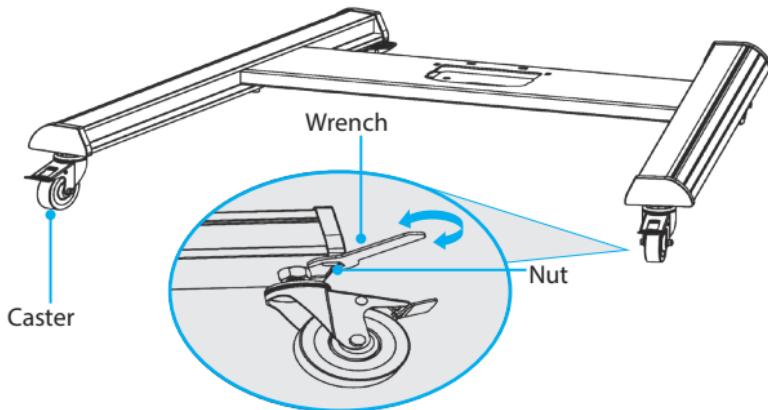

Attach the column to the base


1. Snap the column cover onto the top of the column. (figure 3)

figure 3

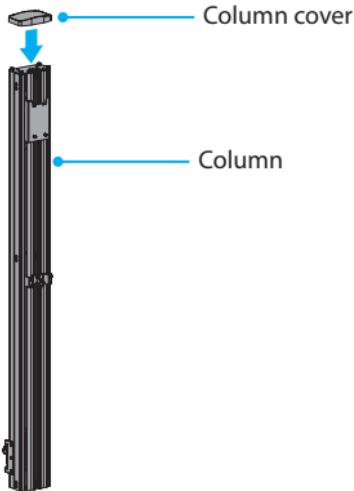


2. Press the pedal locks down on each of the casters to lock them in place and prevent the legs from moving as you attach the column. (figure 4)

figure 4

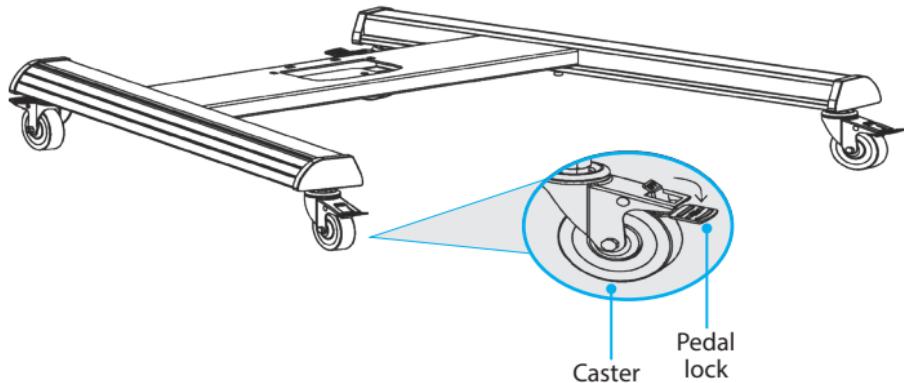


3. Line up the holes in the bottom of the column with the holes in the base.
4. While another person holds the column upright, insert the four M8x25 mm screws through the base and into the column.
5. Use the hex key to tighten the M8x25 mm screws. (figure 5)

figure 5

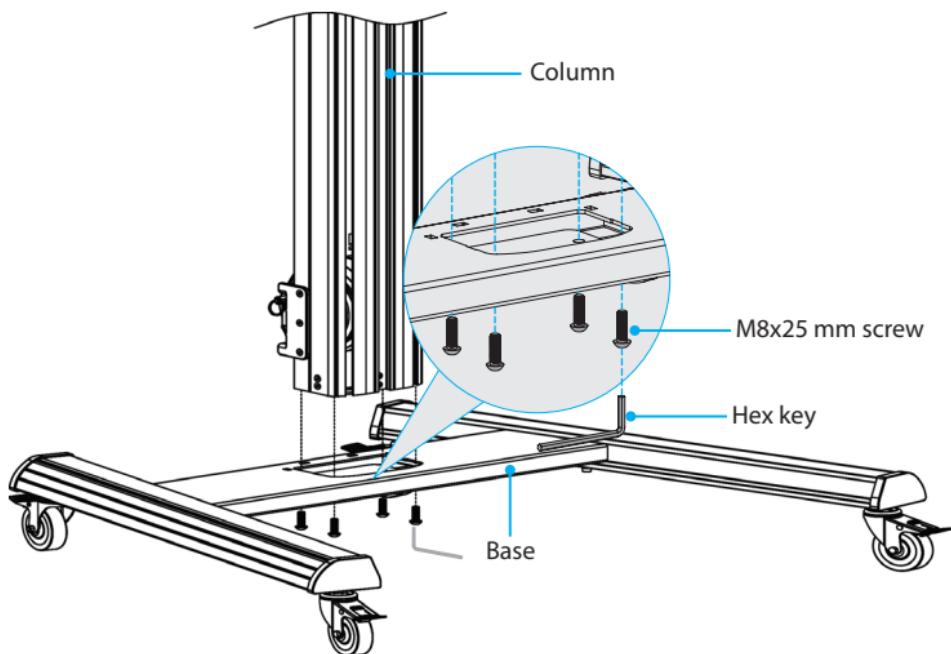

6. Snap the left base cover and the right base cover onto the base and legs. (figure 6)


figure 6

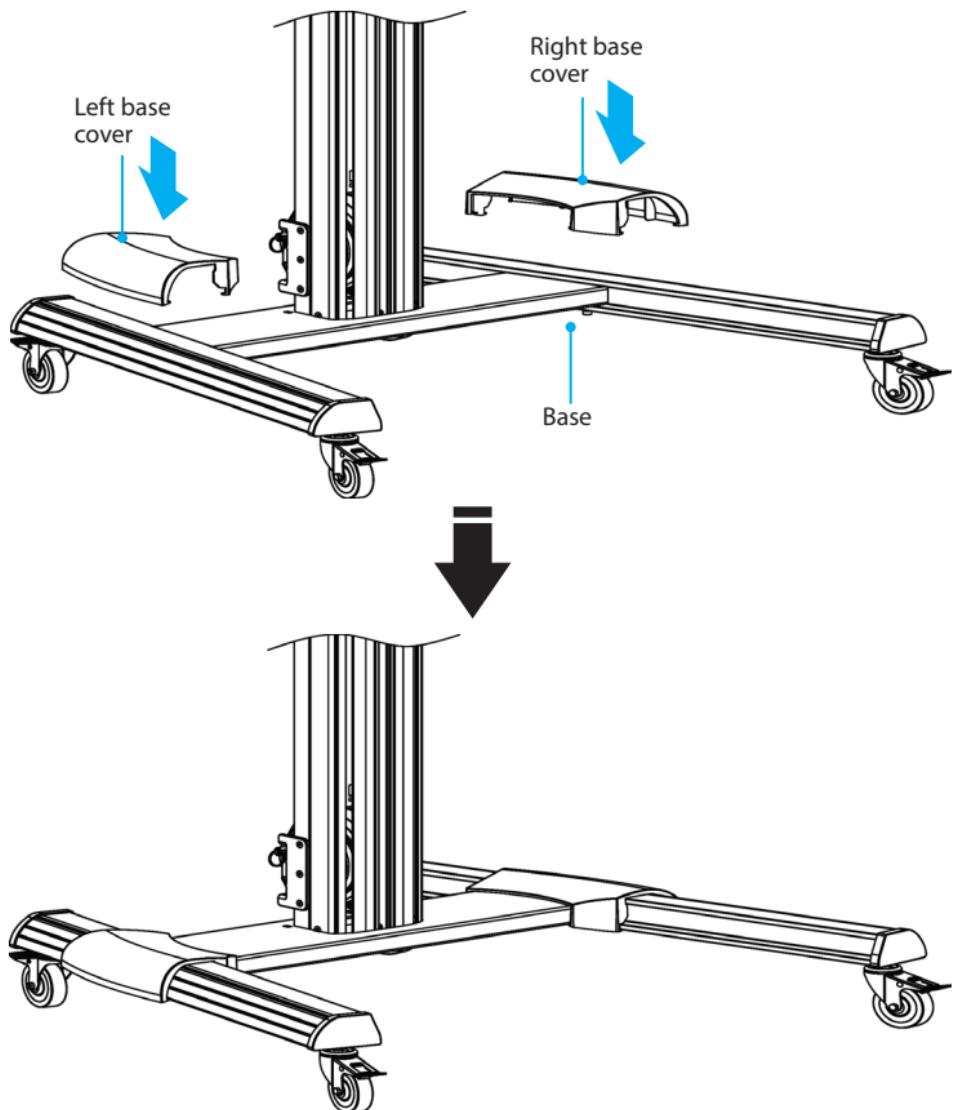

Assemble the TV mount


1. Slide the crossbars through the top and bottom openings in the support plate. (figure 7)

figure 7

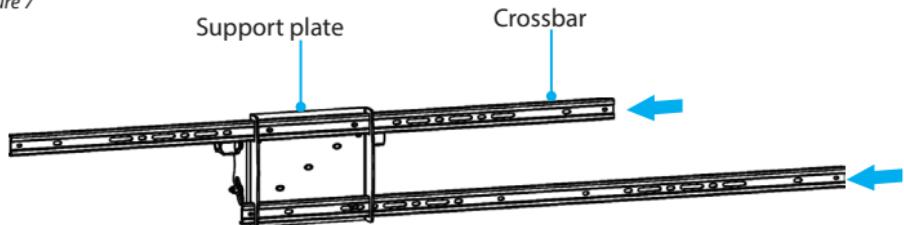


2. Position the crossbars so that they are centered on the support plate and the holes on the crossbars are aligned with the holes in the support plate.
3. Insert four of the M6x14 mm screws through the crossbars and into the support plate. (figure 8)
4. Use a Phillips type screwdriver to tighten the M6x14 mm screws.

figure 8

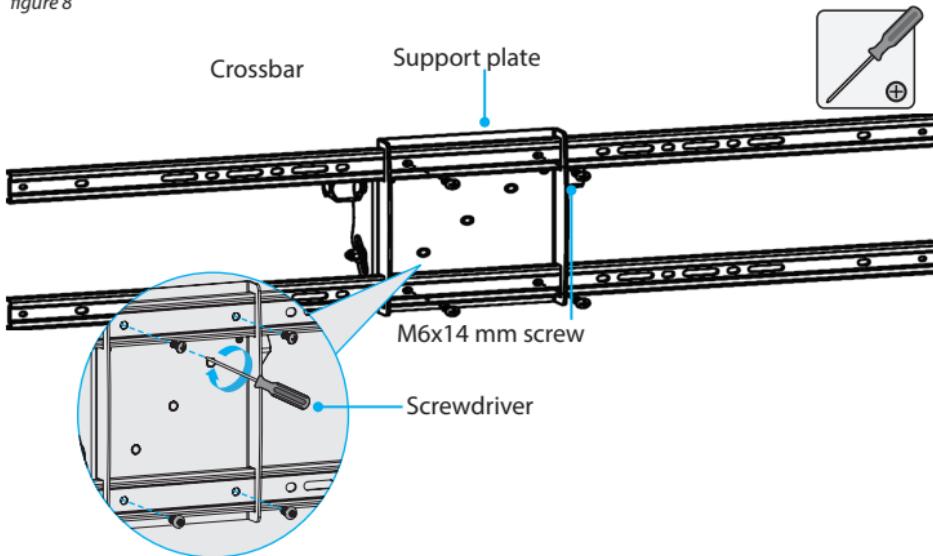

5. Snap an end cap onto each of the four ends of the crossbars. (figure 9)


figure 9

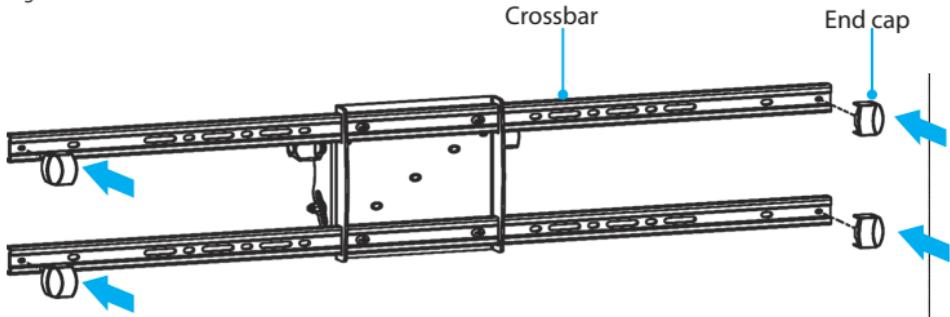

Attach the support plate to the column


1. Lift up the support plate and hook the top of the support plate onto the protrusion and the studs on the column. (figure 10)

figure 10

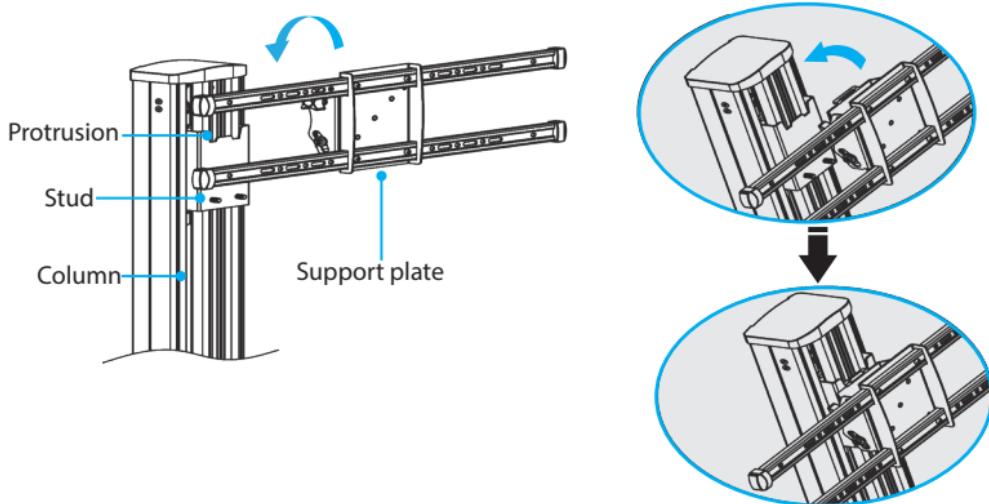

2. Place the support plate nuts over the studs on the column and use your fingers to tighten the support plate nuts.
3. Use the wrench to finish tightening the support plate nuts. (figure 11)

figure 11

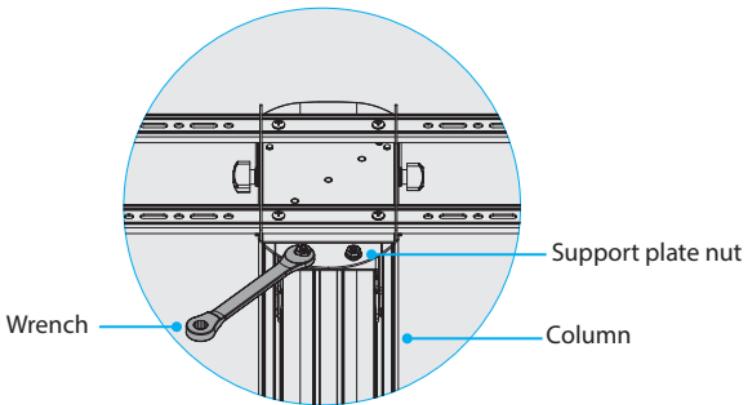

Move the support plate to the lowest position


When the spring-loaded pin is positioned in one of the holes in the side of the spool at the bottom of the column, the vertical position of the TV is locked and you can't move the TV up or down the column. (figure 12)

If you pull the pin out of the spool and turn it to the unlocked position (figure 12), the TV is no longer locked in place and can be moved up or down the column.

Caution! You should avoid leaving the pin in the unlocked position.


Warning! Exercise caution when you pull the pin out of the spool and turn it to the unlocked position. The weight of the TV or support plate may not be counterbalanced and could free fall down the column or spring upwards, resulting in damage to the TV or support plate, or personal injury.

figure 12

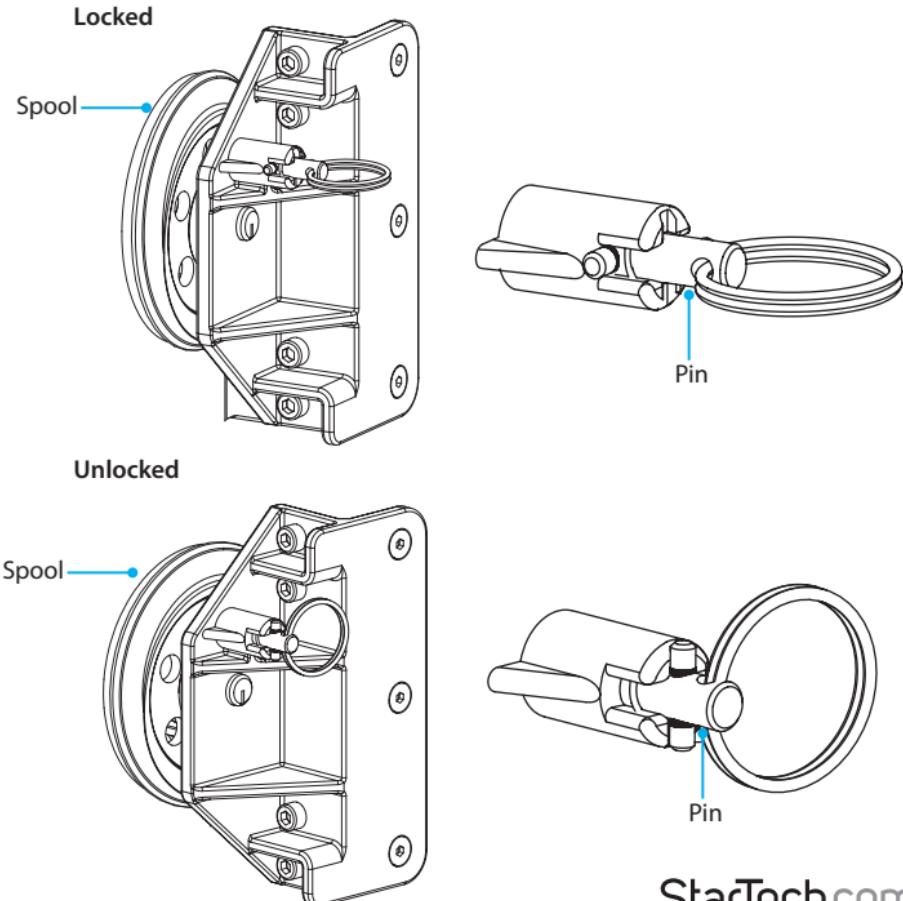

1. To unlock the vertical position of the support plate, at the bottom of the column, next to the spool, pull the pin out and turn it to the unlocked position. (figure 13)

figure 13

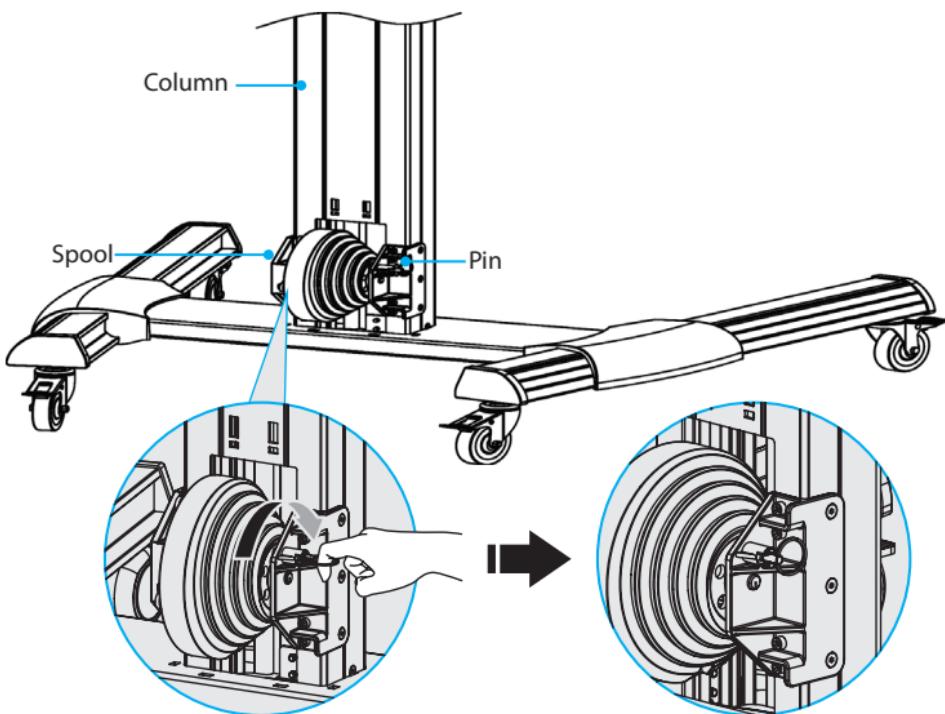

2. Pull the support plate and adapter brackets down until they are at the bottom of the column.
3. Pull the pin and turn it to the locked position.
4. To make sure that the pin is properly aligned in one of the holes, pull up or push down on the support plate. You may hear a clicking sound as the spring-loaded pin goes into the hole and prevents the spool from rotating.

Caution! If the pin is misaligned and isn't fully inserted into one of the holes on the spool, the vertical position isn't locked and the TV could free fall down the column or spring upwards, resulting in damage to the TV or personal injury.

When the pin is aligned in one of the holes and the support plate is locked in place, it shouldn't move if you pull up or push down on it.

Attach the adapter brackets to a flush mounting surface

To accommodate different TV designs, the STNDMTV70 comes with five sets of screws of different lengths and diameters, TV washers with two hole sizes, and two sizes of spacers.

Warning! Make sure that the weight of the TV doesn't exceed the weight capacity of this product. If you exceed the weight capacity, you might experience personal injury or damage to the product. This product can support the following weight: 40 kg (88 lb.) when the lift mechanism is locked or 8 to 25 kg (18 to 55 lb.) when the lift mechanism is in use.

1. To select the combination of mounting hardware that you need to use to attach the adapter brackets to the TV, complete the following:

- Determine the depth of the mounting holes on the TV.
- Determine the diameter of the mounting holes on the TV.

Note: If you're using a TV with a flush mounting surface, you don't need to use any of the provided spacers.

2. Position the adapter brackets so that the hooks on the adapter brackets are pointed towards the bottom of the TV and are aligned with the mounting holes on the back of the TV.



3. Depending on the screw size that you're using, place the TV washers so that either the small or large holes are positioned over the adapter brackets.

4. Insert the M5x14 mm screws or the M6x14 mm screws through the TV washers, adapter brackets, and into the back of the TV.

5. Use a Phillips type screwdriver to tighten the screws. (figure 14)

Warning! Do not over-tighten the screws. If you encounter resistance while you're tightening the screws, stop tightening. Failure to do so could result in damage to the TV.

figure 14

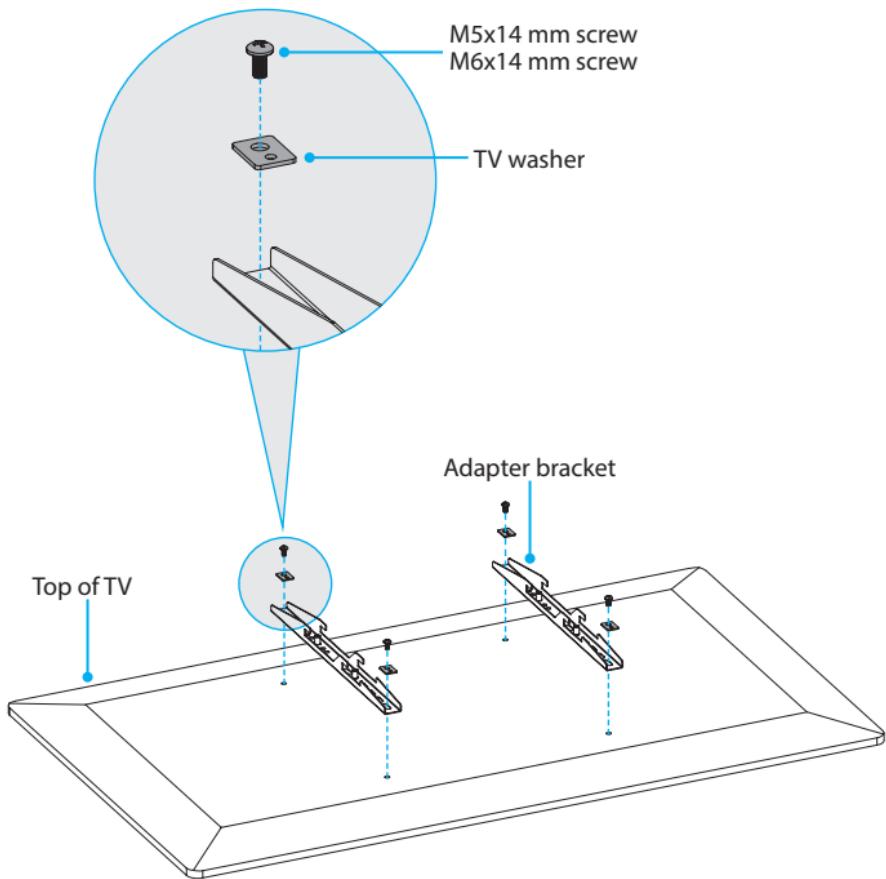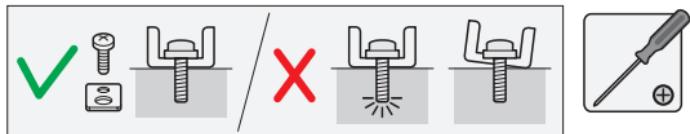

Attach the adapter brackets to a recessed mounting surface

To accommodate different TV designs, the STNDMTV70 comes with five sets of screws of different lengths and diameters, TV washers with two hole sizes, and two sizes of spacers.

Warning! Make sure that the weight of the TV doesn't exceed the weight capacity of this product. If you exceed the weight capacity, you might experience personal injury or damage to the product. This product can support the following weight: 40 kg (88 lb.) when the lift mechanism is locked or 8 to 25 kg (18 to 55 lb.) when the lift mechanism is in use.

1. To select the combination of mounting hardware that you need to use to attach the adapter brackets to the TV, complete the following:

- Determine the depth of the mounting holes on the TV.
- Determine the diameter of the mounting holes on the TV.

2. Consult the images below and on the next page to see the different hardware combinations available, and select the one that works best with the TV.

M6x30 mm screw



M8x30 mm screw



or

combined with



2 small spacers

or



1 small spacer

or




1 large spacer

M8x50 mm hardware combinations are illustrated on the next page

M8x50 mm



combined with

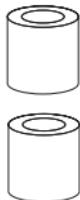

or



or



2 large spacers

1 small spacer

2 large spacers



2 small spacers

2 large spacers

3. Position the adapter brackets so that the hooks on the adapter brackets are pointed towards the bottom of the TV and are aligned with the mounting holes on the back of the TV.
4. Depending on the screw size that you're using, place the TV washers so that either the small or large holes are positioned over the adapter brackets.
5. Insert the M6x30 mm screws, M8x30 mm screws, or the M8x50 mm screws through the TV washers, adapter brackets, spacers, and into the back of the TV.
6. Use a Phillips type screwdriver to tighten the screws. (figure 15)

Warning! Do not over-tighten the screws. If you encounter resistance while you're tightening the screws, stop tightening. Failure to do so could result in damage to the TV.

figure 15

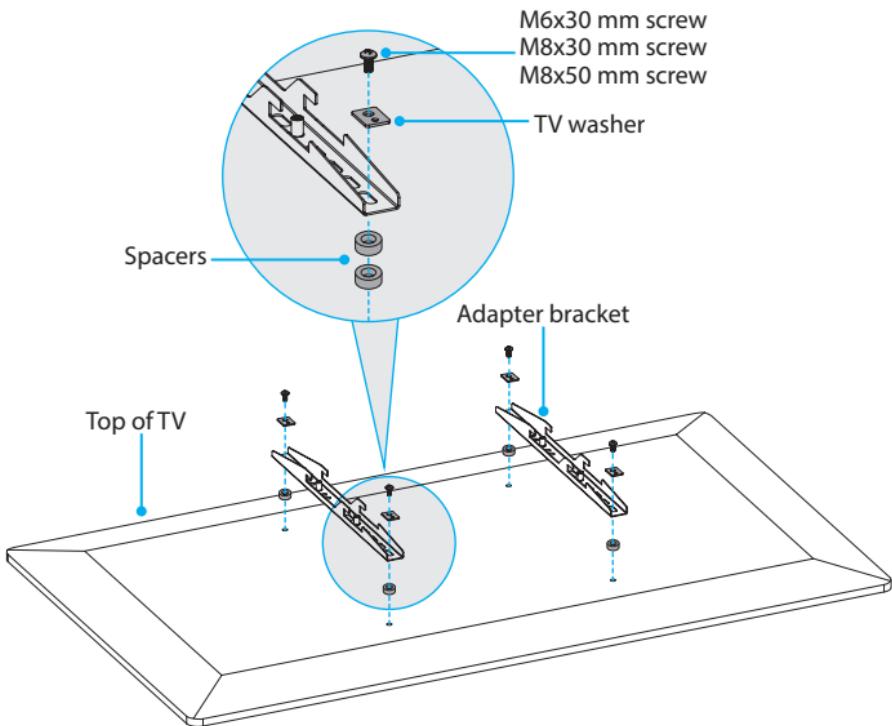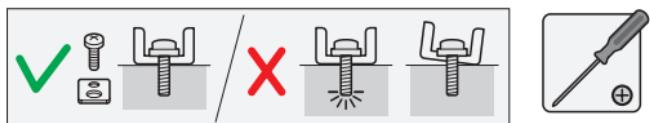


Attach the TV to the column

Warning! Attaching the TV requires multiple people. Do not attempt to complete this task by yourself.

Warning! Make sure that you move the support plate to the lowest position on the column before you attach the TV. For more information, see the "Move the support plate to the lowest position" section.


1. If you haven't done so already, press the pedal locks down on each of the casters to prevent the legs from moving as you attach the TV to the column.
2. With a person holding each side of the TV, carefully lift up the TV and hook the adapter brackets over the crossbars. (figure 16)

figure 16

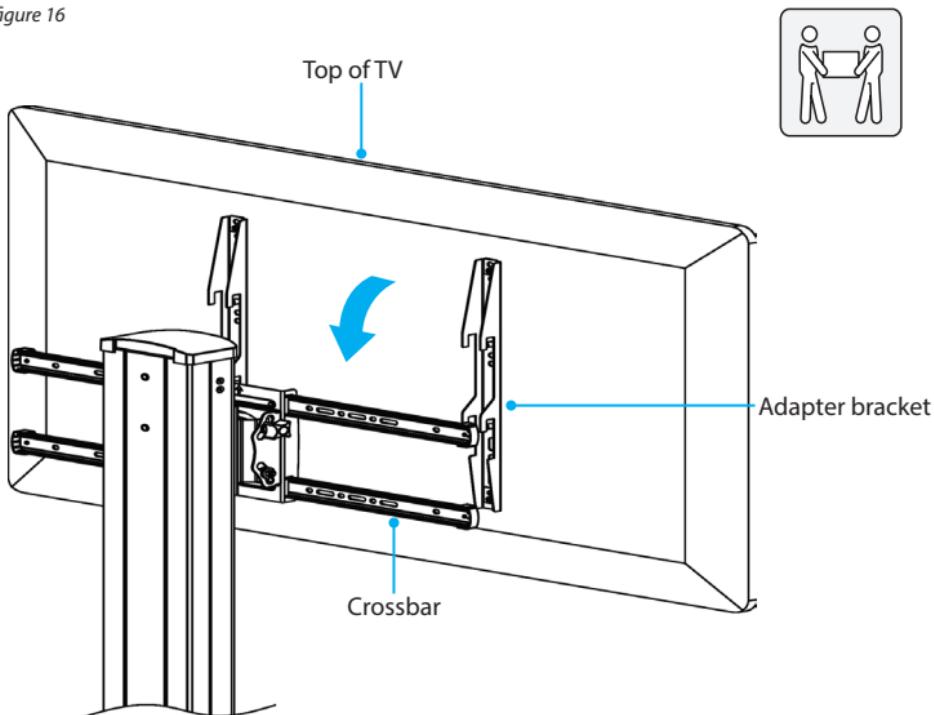

3. Center the TV on the crossbars, and insert four M6x14 mm screws through the crossbars and into the adapter brackets. (figure 17)
4. Use a Phillips type screwdriver to tighten the M6x14 mm screws.


figure 17

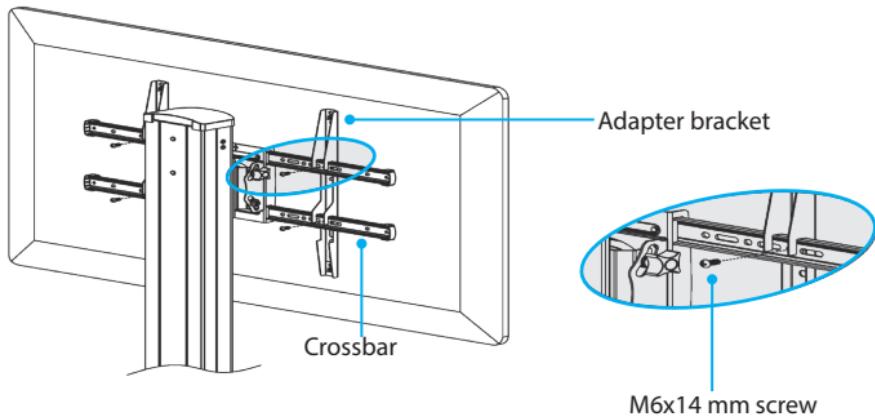

5. To secure the TV in the landscape position, insert two of the M6x8 mm screws into the support plate and use a Phillips type screwdriver to tighten the screws. (figure 18)

To move the TV into portrait orientation, see the "Change the orientation of the TV" section.

figure 18

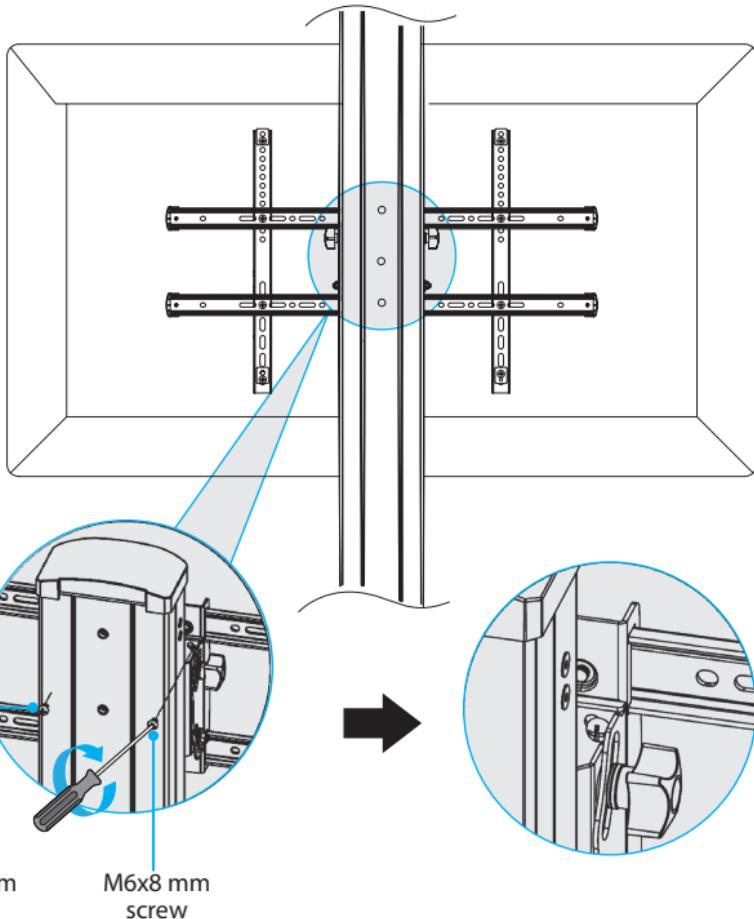

M6x8 mm

screw

M6x8 mm
screw

Counterbalance the weight of the TV

When you add a TV to the STNDMTV70, you need to adjust the lift capacity of the TV cart to support the weight of the TV. If the lift capacity of the STNDMTV70 isn't set correctly, when you let go of the TV, it could free fall down the column or move up the column unaided, resulting in damage to the TV or personal injury.


Warning! Counterbalancing the weight of the TV requires multiple people. Do not attempt to complete this task by yourself.

1. At the bottom of the column, pull the pin out of the spool and turn it to the unlocked position.
2. Move the TV up the column a short distance and loosen your hold on the TV to see if it remains stationary. Based on what you observe, do one of the following:
 - If the TV rises up the column, use the wrench to turn the knob near the spool clockwise. (figure 19)
 - If the TV falls down the column, use the wrench to turn the knob near the spool counterclockwise. (figure 19)

Warning! If you encounter resistance when you turn the knob, stop turning it. If you continue to turn the knob, you may damage the TV cart.

Note: To counterbalance the weight of the TV, you may need to turn the knob near the spool up to 80 full revolutions.

figure 19

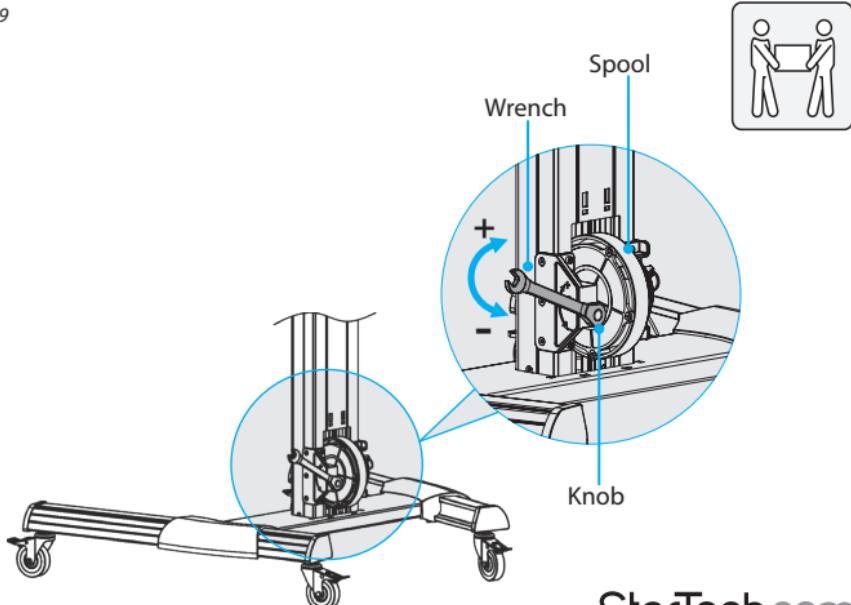

3. Repeat step 2 until the weight of the TV is counterbalanced.

Note: When the weight of the TV is properly counterbalanced, the TV will remain stationary on the column when you loosen your hold on it, and you will be able to move the TV up or down the column with minimal effort.

4. When the weight of the TV is counterbalanced, move the TV to the desired height.

5. Pull the pin and turn it to the locked position.

6. To make sure that the pin is properly aligned in one of the holes in the spool, pull up or push down on the TV. You may hear a clicking sound as the spring-loaded pin goes into a hole and prevents the spool from rotating.

When the pin is aligned in one of the holes and the TV is locked in a vertical position, the TV shouldn't move when you pull up or push down on it.

Caution! If the pin is misaligned and isn't fully inserted into one of the holes on the spool, the vertical position isn't locked and the TV could free fall down the column or spring upwards, resulting in damage to the TV or personal injury.


Warning! The degree of the lift strength that you set the STNDMTV70 to depends upon the weight of the TV. Every time that you take a TV off of the STNDMTV70 and add a different TV, you must counterbalance the weight of the TV again.

Attach the plastic cover

Caution! Exercise caution when you assemble the plastic cover because the tabs on the plastic cover can be broken off easily if you use excess force during assembly.



1. Carefully separate the two halves of the plastic cover. (figure 20)

figure 20

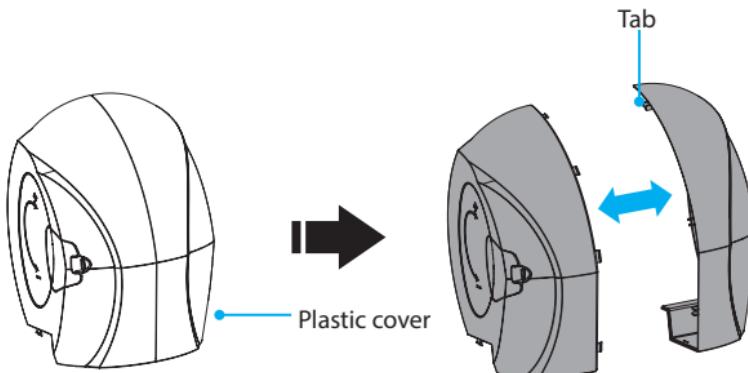

2. Place the two halves of the plastic cover around the spool and snap the two sides together.
3. Move the assembled plastic cover in towards the column and carefully hook the tabs on the top of the plastic cover into the slots on the column.
4. Press the plastic cover down towards the base and snap the tabs on the plastic cover into the holes on the column and the base. (figure 21)


figure 21

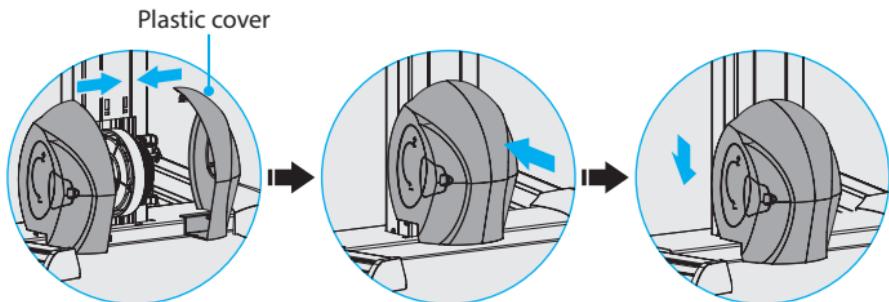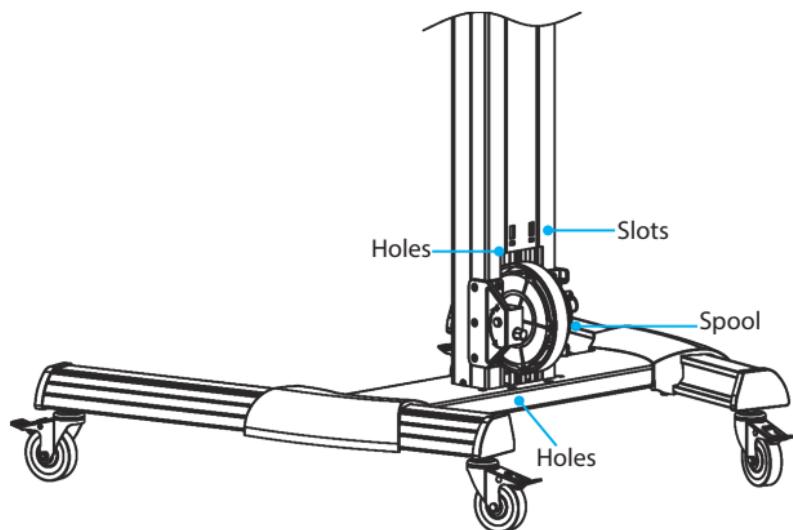

Attach the cable clips

1. Remove the backing from the cable clips.
2. Attach the cable clips along the column.
3. Route the cables down the column and through the cable clips.
4. Snap the cable clips closed. (figure 22)


figure 22

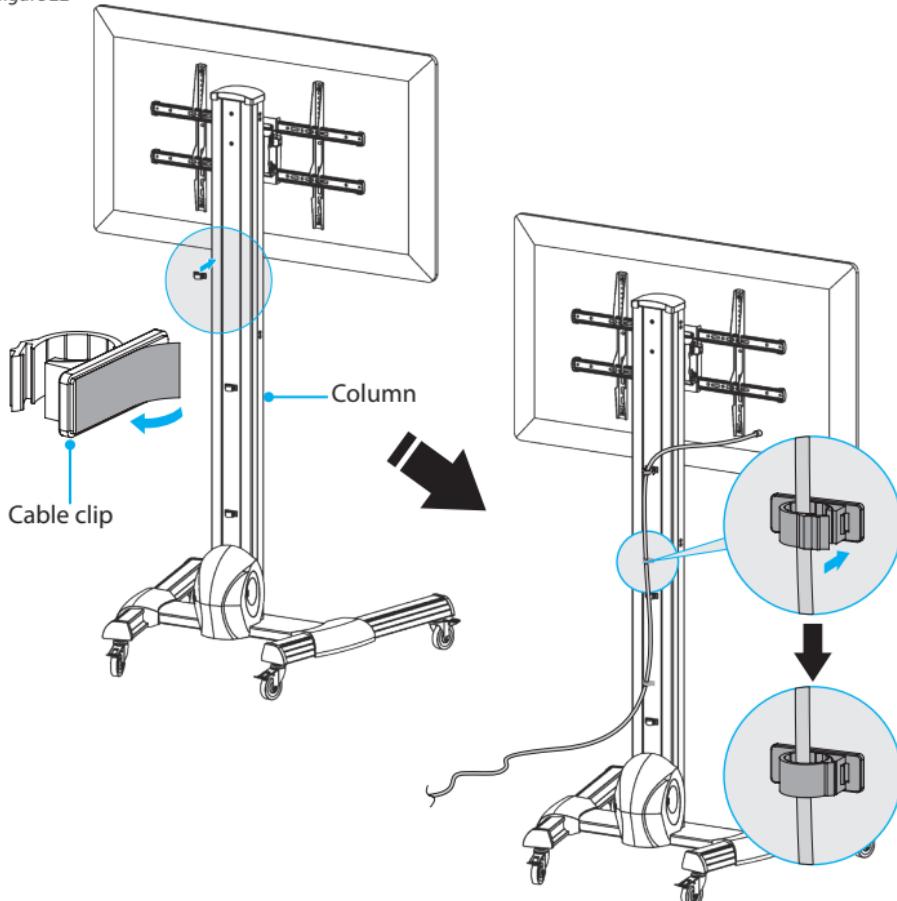

Install the multimedia shelf


1. Place the shelf spacers over the projections on the underside of the multimedia shelf.
2. Position the right and left support brackets over the washers so that the holes are aligned and the scalloped edges of the adapter brackets are pointed towards the outside edges of the multimedia shelf.
3. Place the washers over the holes in the adapter brackets, and insert the M6x8 mm screws through the washers, adapter brackets, and into the projections on the multimedia shelf.
4. Use a Phillips type screwdriver to tighten the M6x8 mm screws. (figure 23)

figure 23

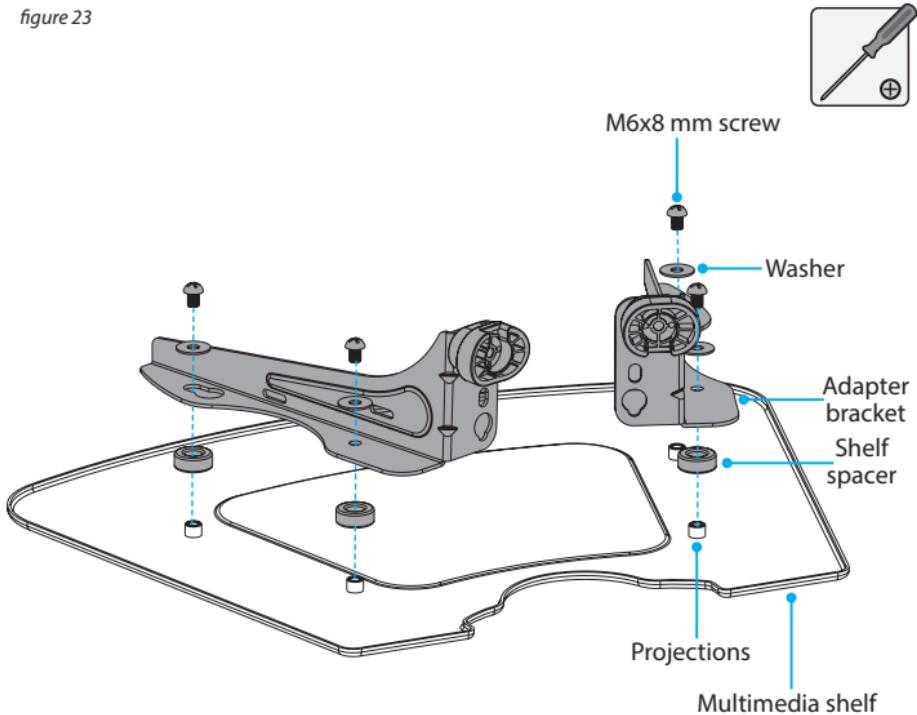


5. Turn the knob on the shelf bracket counterclockwise to loosen it.
6. Move the shelf bracket to the height that you want the multimedia shelf to be at, and turn the knob clockwise to tighten it. (figure 24)

figure 24

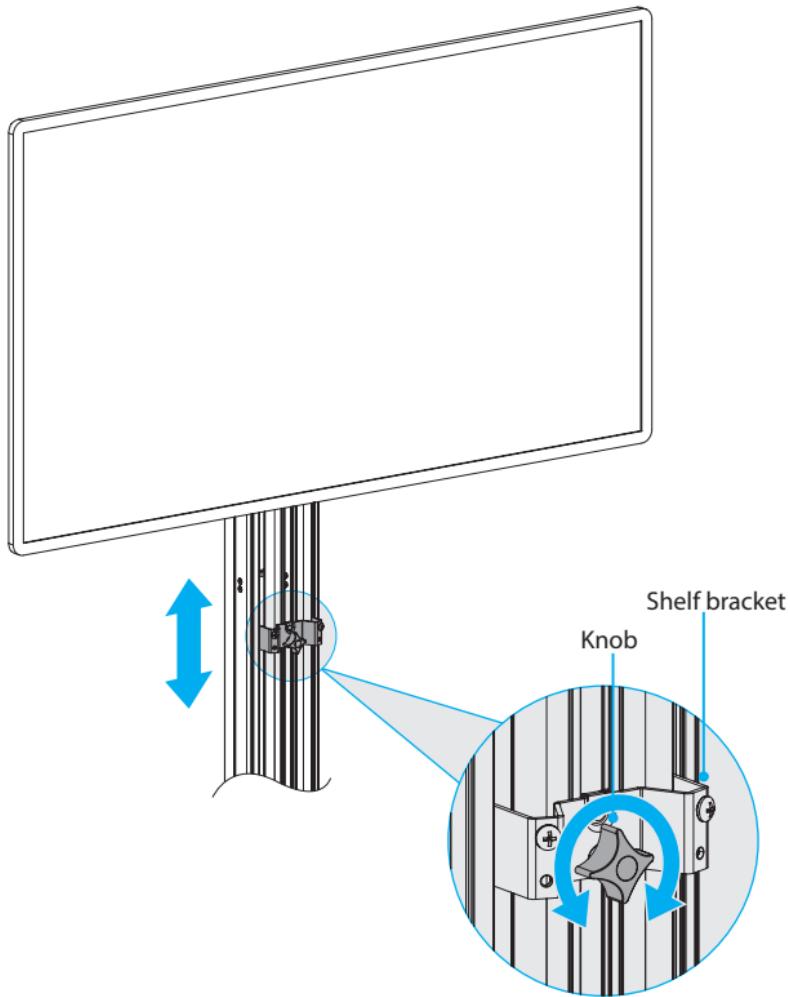


7. Hook the multimedia shelf over the screws in the shelf bracket and slide the multimedia shelf downwards.
8. Insert two M6x14 mm screws into the multimedia shelf and into the shelf bracket.
9. Use a Phillips type screwdriver to tighten all four of the M6x14 mm screws. (figure 25)
figure 25

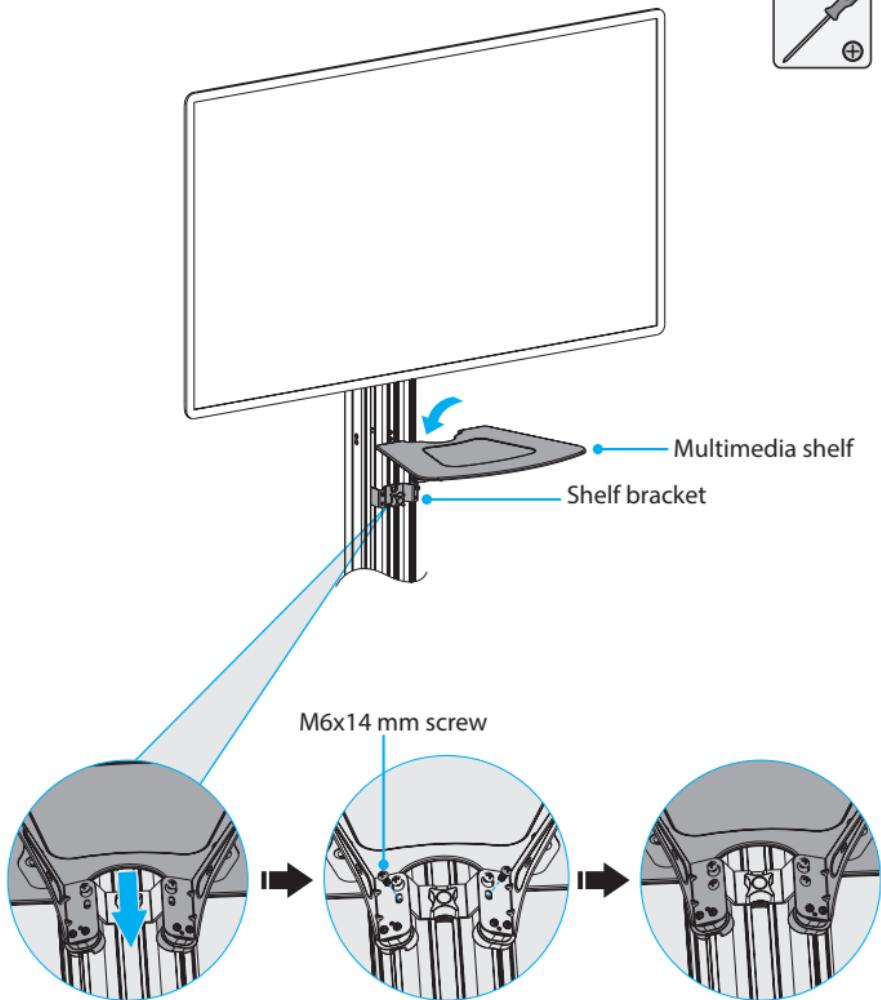

Attach the camera shelf

1. Line up the holes on the camera shelf with the holes on the end of the connecting plate.
2. Insert the three countersunk screws through the top of the camera shelf and into the connecting plate.
3. Use a Phillips type screwdriver to tighten the countersunk screws. (figure 26)


figure 26

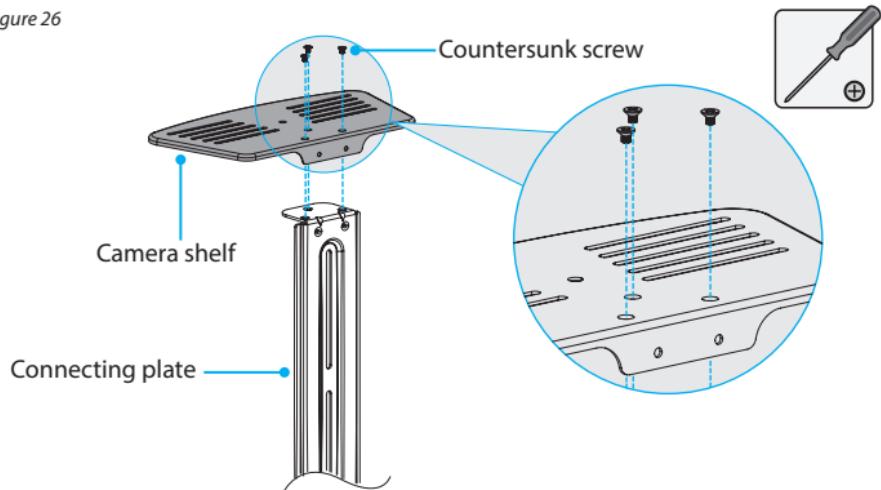

4. Insert the two M4x6 mm screws into the camera shelf and into the side of the connecting plate. (figure 27)


5. Use a Phillips type screwdriver to tighten the screws in place.

figure 27

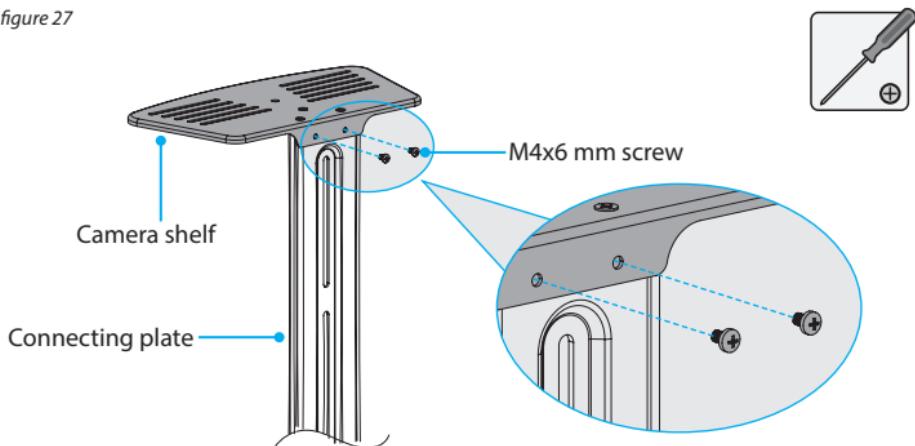

6. Determine the height that you want the camera shelf to be at and line it up with the mounting slots on the back of the column.
7. Insert the two M6x25 mm screws through the connecting plate and into the column. (figure 28)
8. Use a Phillips type screwdriver to tighten the screws in place.


figure 28

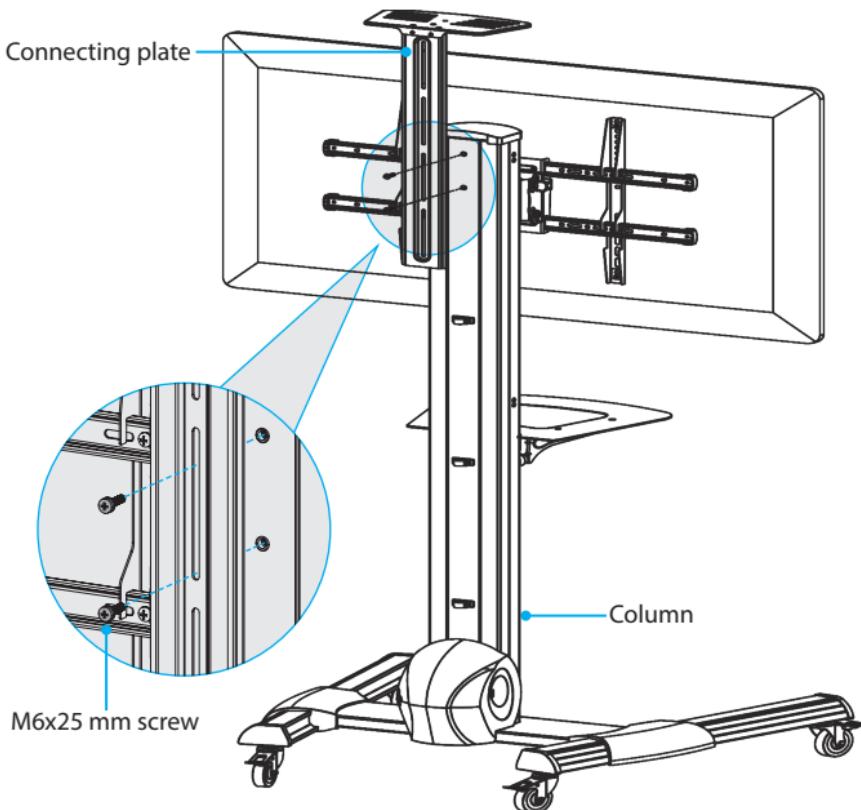

Attach the wrench

1. Thread the two hook-and-loop ties through the hole in one of the support brackets under the multimedia shelf.
2. Hold the wrench against the support bracket and wrap the hook-and-loop ties around the wrench. (figure 29)

figure 29

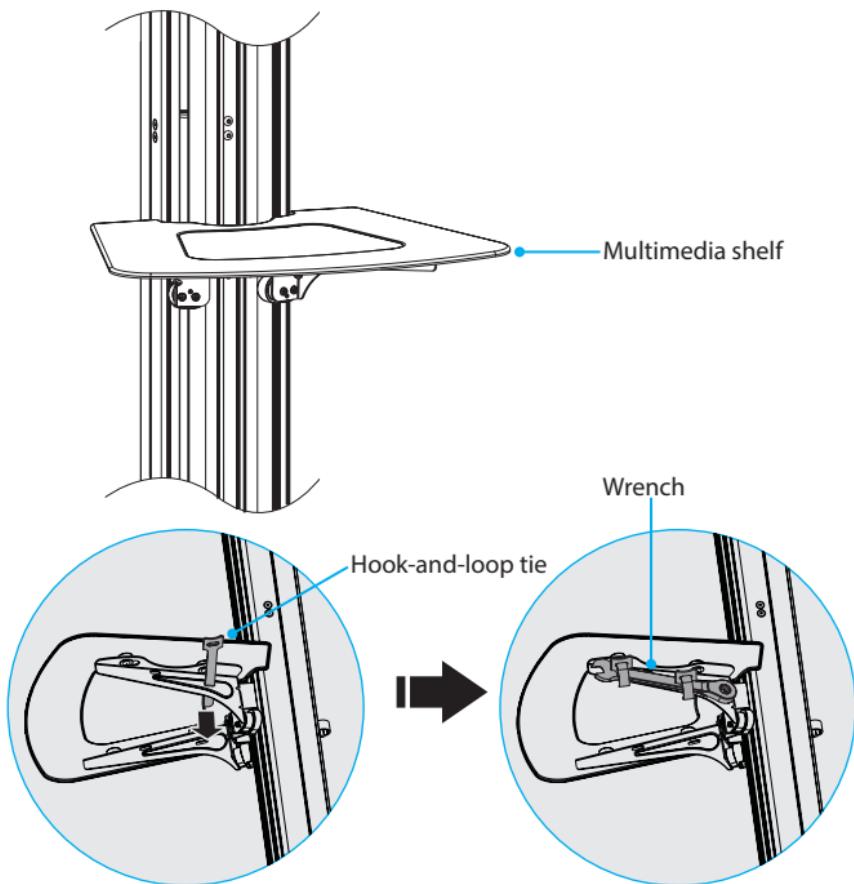


Adjusting the STNDMTV70

Change the orientation of the TV

You can position the TV in either landscape or portrait orientation on the STNDMTV70.

1. To display the TV in portrait orientation, if present, remove the two M6x8 mm screws from the back of the support plate.
2. Rotate the TV 90° clockwise.
3. Reinsert the M6x8 mm screws you removed in step 1, and use a Phillips type screwdriver to tighten them. (figure 30)


figure 30

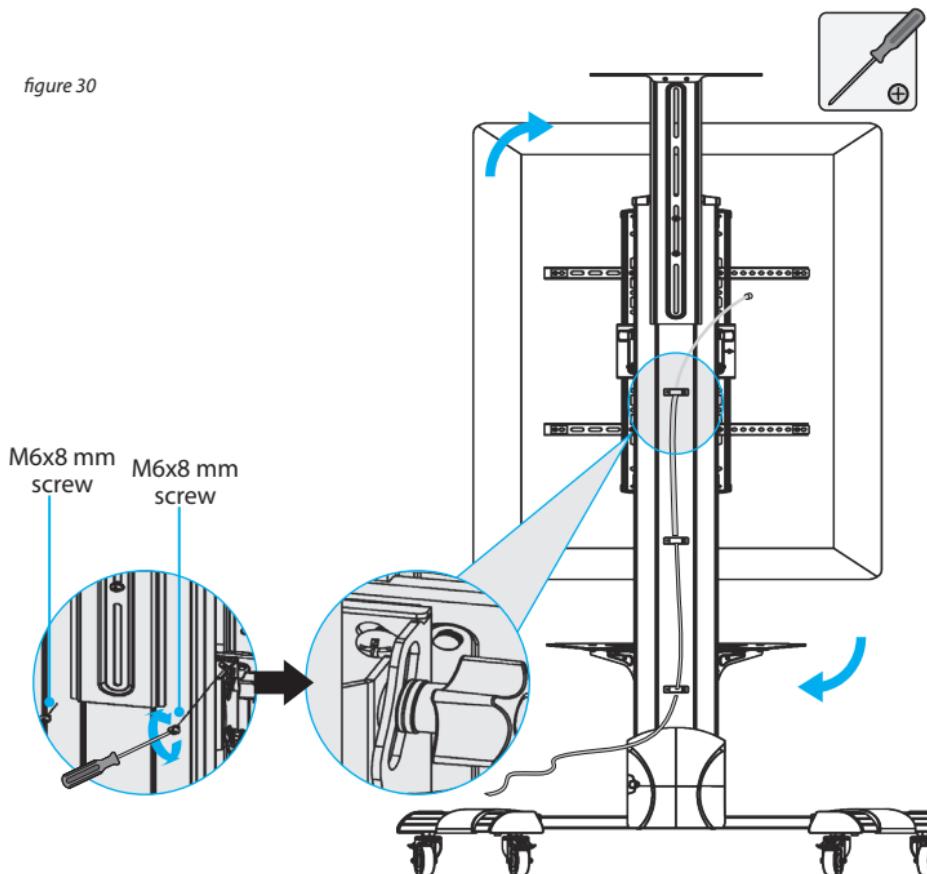

Adjust the angle of the TV

1. Turn the knobs on either side of the support plate counterclockwise to loosen them.
2. Push or pull the top or bottom of the TV to adjust the angle of the TV.
3. Turn the knobs on either side of the support plate clockwise to tighten them.
(figure 31)


figure 31

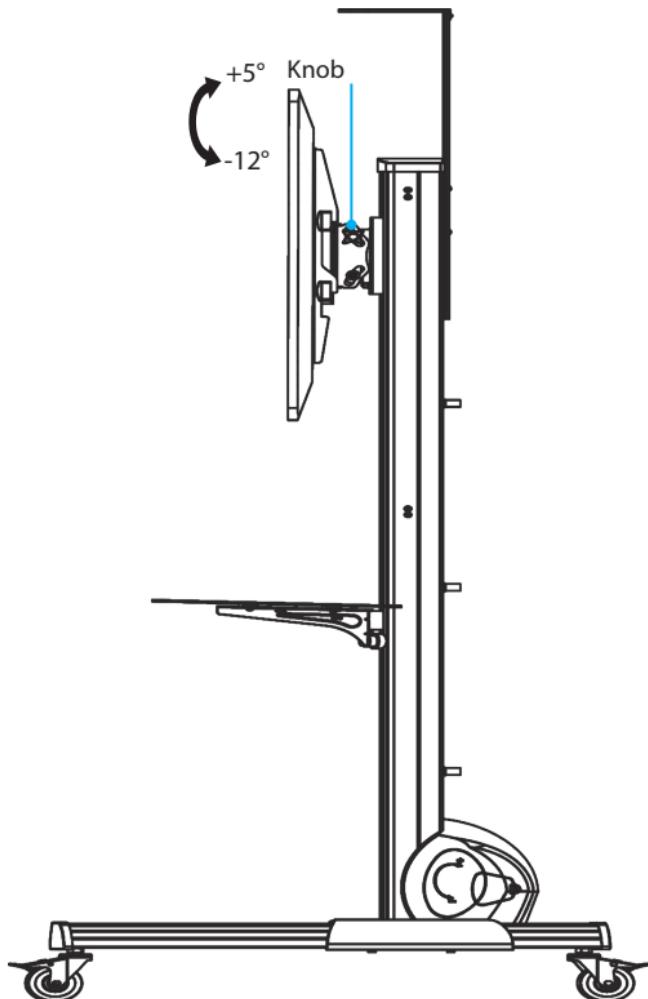

Adjust the height of the multimedia shelf

1. Under the multimedia shelf, turn the knob counterclockwise.
2. Move the multimedia shelf to the desired height, and turn the knob clockwise to tighten it into place. (figure 32)


figure 32

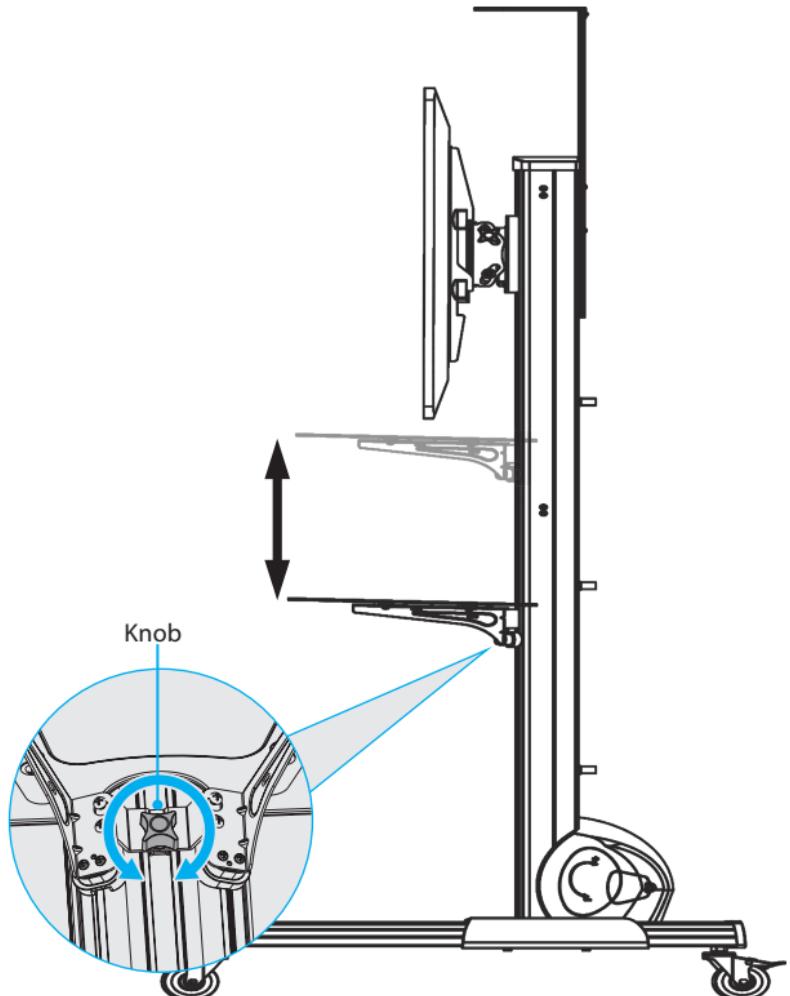

Adjust the height of the camera shelf

1. Loosen the two M6x25 mm screws attaching the connecting plate to the column.
2. Move the connecting plate to the desired height, and use a Phillips type screwdriver to tighten the M6x25 mm screws into place. (figure 33)

figure 33

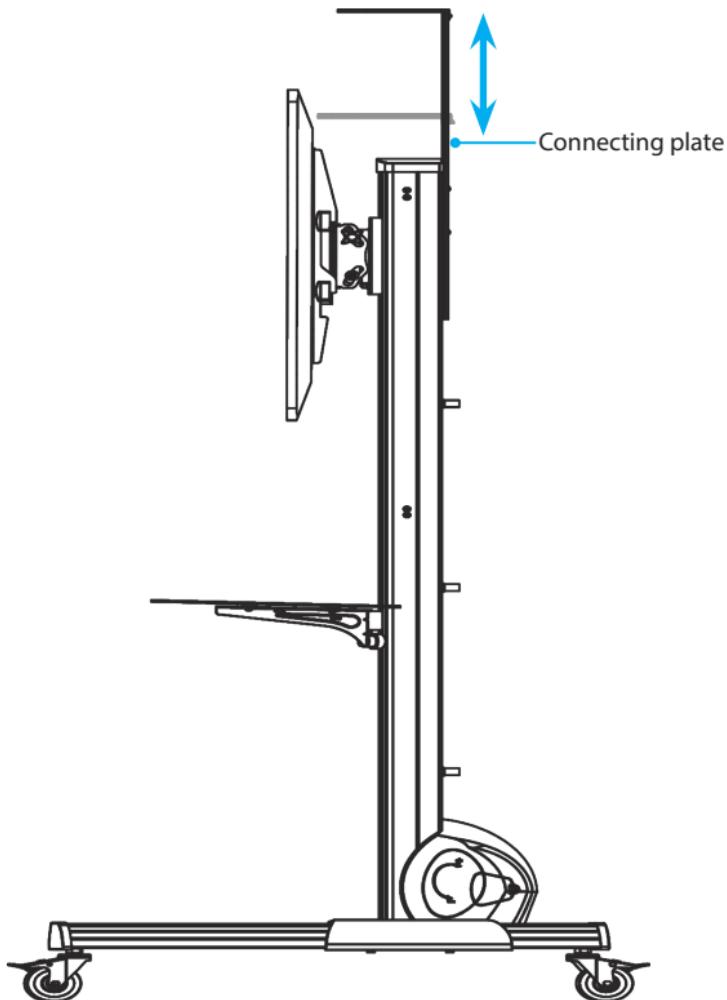

Lock the vertical position of the TV

When the TV is at the height that you want it to be at, you should lock the vertical position of the TV to prevent the TV from moving up or down the column.

Warning! Exercise caution when you pull the pin out of the spool and turn it to the unlocked position. The weight of the TV may not be counterbalanced and the TV could free fall down the column or spring upwards, resulting in damage to the TV or personal injury.

1. Pull the pin out of the spool and turn it to the unlocked position.
2. If necessary, adjust the height of the TV.
3. Pull the pin and turn it to the locked position.
4. To make sure that the pin is properly aligned in one of the holes in the spool, pull up or push down on the TV. You may hear a clicking sound as the spring-loaded pin goes into the hole and prevents the spool from rotating.

When the pin is aligned in one of the holes and the TV is locked in a vertical position, the TV shouldn't move when you pull up or push down on it.

Caution! If the pin is misaligned and isn't fully inserted into one of the holes on the spool, the vertical position isn't locked and the TV could free fall down the column or spring upwards, resulting in damage to the TV or personal injury.

5. Close the door on the plastic cover.

Technical support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit **www.startech.com/support** and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit **www.startech.com/downloads**

Warranty information

This product is backed by a five-year warranty.

StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.



www.quefairedemesdechets.fr

Hard-to-find made easy. At StarTech.com, that isn't a slogan. It's a promise.

StarTech.com is your one-stop source for every connectivity part you need. From the latest technology to legacy products — and all the parts that bridge the old and new — we can help you find the parts that connect your solutions.

We make it easy to locate the parts, and we quickly deliver them wherever they need to go. Just talk to one of our tech advisors or visit our website. You'll be connected to the products you need in no time.

Visit www.startech.com for complete information on all StarTech.com products and to access exclusive resources and time-saving tools.

StarTech.com is an ISO 9001 registered manufacturer of connectivity and technology parts since 1985 with operations around the world.

Reviews

Share your experiences using StarTech.com products, including product applications and setup, what you love about the products, and areas for improvement.

StarTech.com Ltd.	StarTech.com LLP	StarTech.com Ltd.	StarTech.com Ltd.
45 Artisans Crescent London, Ontario N5V 5E9 Canada	4490 South Hamilton Road Groveport, Ohio 43125 U.S.A.	Unit B, Pinnacle 15 Gowerton Road Brackmills, Northampton NN4 7BW United Kingdom	Siriusdreef 17-27 2132 WT Hoofddorp The Netherlands

FR: fr.startech.com

DE: de.startech.com

ES: es.startech.com

NL: nl.startech.com

IT: it.startech.com

JP: jp.startech.com