


## 6U Wall-Mounting Bracket - 13.7 in Deep

### Product ID

WALLMOUNT6

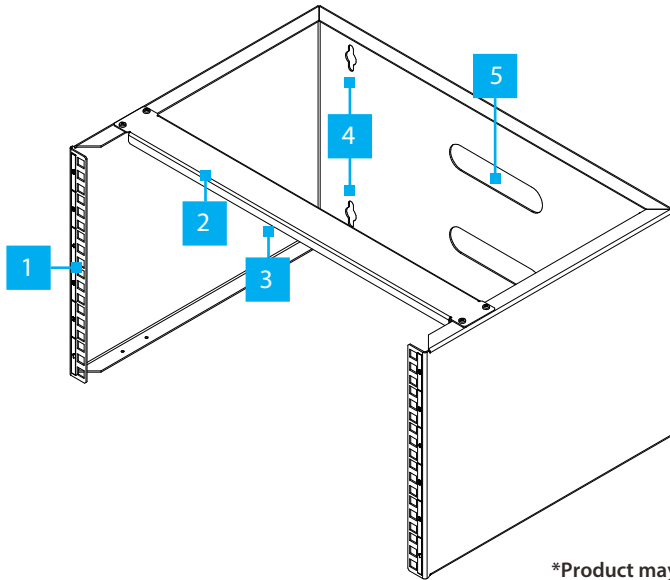

\*Product may vary from image

Component	Function
1 Mounting Posts	<ul style="list-style-type: none"> <li>• <b>Mounting Holes</b> along the <b>Mounting Posts</b> allow to mount <b>Server Rack Equipment</b></li> </ul>
2 Stabilizer Bar	<ul style="list-style-type: none"> <li>• Helps keep the <b>Wall-Mounting Bracket</b> sturdy and stable</li> </ul>
3 Grounding Point (Not in Picture)	<ul style="list-style-type: none"> <li>• Attach a <b>Grounding Wire</b> (sold separately) to the <b>Wall-Mounting Bracket</b> and to an <b>Earth Ground Connection</b></li> </ul>
4 Mounting Holes (x 4)	<ul style="list-style-type: none"> <li>• Wall mount the <b>Wall-Mounting Bracket</b></li> </ul>
5 Cable Management Slots (x 2)	<ul style="list-style-type: none"> <li>• (Optional) Route the equipment <b>Cables</b></li> </ul> <p><b>Notes:</b> A hole must be cut in the wall behind the Wall-Mounting Bracket to route the Cables</p> <p>The Cables can be routed from the bottom of the Wall-Mounting Bracket</p>

### Package Contents

- 6U Wall-Mount Rack x 1
- M6 Screws x 12
- M6 Cage Nuts x 12
- M6 Plastic Washers x 12
- Wall-Mounting Screws x 4
- Plastic Wall Anchors x 4
- Quick-Start Guide x 1

### Requirements

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit: [www.StarTech.com/WALLMOUNT6](http://www.StarTech.com/WALLMOUNT6)

- Phillips head screwdriver
- Cage nut tool (optional)
- 10 mm wrench

#### Warnings!

*Product installation and mounting should be completed by a certified professional as per the local safety and building code guidelines.*

*Read the entire Quick-Start Guide and ensure the instructions are fully understood before using this product.*

*Before adding equipment to this product, ensure this product has been properly mounted.*

*Never operate this product if parts are missing or damaged.*

*Ensure the weight of the equipment does not exceed the weight capacity of this product. If the weight capacity is exceeded, personal injury or damage to the equipment is possible. This product can support the following weight: 44 lb (20 kg).*

# Installation

## Mount the Wall-Mounting Bracket

### Warnings!

StarTech.com Ltd. is not responsible for any property damage and/or personal injury resulting from the installation procedures outlined in this technical document.

The mounting instructions and/or hardware included with this product may not be suitable for the specific wall structure used. If you lack the necessary expertise required to attach this product to the wall structure or to assess the suitability of the hardware provided, please contact a professional installer.

If you lack the necessary expertise to wall mount this product, contact a construction professional to install the wall mount or to provide specific mounting instructions for the wall structure.

Wall structures vary. Ensure the type of wall structure and mounting hardware will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment.

**Note:** The Mounting Holes are 16 inches (406 mm) apart.

1. Determine the target position of the **Wall-Mounting Bracket**, factoring in:
  - Wall type (i.e., drywall, wood studs, or concrete).
  - Dimensions and location of any nearby objects, mechanical, electrical, and plumbing infrastructure.
2. Mount the **Wall-Mounting Bracket** to the wall using the included hardware.

**Note:** The included Wall-Mounting Screws are for wood only.

## Install the Cage Nuts

1. Install the **M6 Cage Nuts** into the **Mounting Holes** on the **Mounting Posts**. If available, use a **Cage Nut Tool** or your preferred installation method to install the **Cage Nuts**.

**Note:** Repeat Step 1 as many times as needed to install the required M6 Cage Nuts for the application. Most Server Rack Equipment requires at least four Cage Nuts for installation.

2. Align the **Mounting Holes** on the **Server Rack Equipment** with the **M6 Cage Nuts** installed on the **Mounting Posts**.
3. Insert the **M6 Screws** (x 4) through the **M6 Plastic Washers** (x 4), the **Mounting Holes** (x 4) on the **Rack Equipment**, and into the **M6 Cage Nuts** (x 4). Tighten each **M6 Screw** (x 4) using a **Phillips Head Screwdriver** to fasten the **Rack Equipment** to the **Mounting Posts**.

**Note:** Repeat Steps 1 to 4 as many times as needed to install additional Server Rack Equipment.

## Ground the Wall-Mounting Bracket

1. Remove the **Nut** on the **Grounding Point** with a **10 mm Wrench**.
2. Slide the **End Loop** of the **Grounding Wire** over the **Threaded Pole** on the **Grounding Point**, or wrap the **Grounding Wire** around the **Threaded Pole** on the **Grounding Point**.
3. Thread the **Nut** onto the **Threaded Pole** and tighten it with a **10 mm Wrench**.
4. Attach the other end of the **Grounding Wire** to an **Earth Ground Connection**.

## Regulatory Compliance

### Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

### Warranty Information

This product is backed by a lifetime warranty.

For further information on product warranty terms and conditions, please refer to [www.startech.com/warranty](http://www.startech.com/warranty)

### Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.



[www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)

**StarTech.com Ltd.**  
45 Artisans Crescent  
London, Ontario  
N5V 5E9  
Canada

**StarTech.com LLP**  
4490 South Hamilton  
Road  
Groveport, Ohio  
43125  
U.S.A.

**StarTech.com Ltd.**  
Unit B, Pinnacle 15  
Gowerton Road  
Brackmills,  
Northampton  
NN4 7BW  
United Kingdom

**StarTech.com Ltd.**  
Siriusdreef 17-27  
2132 WT Hoofddorp  
The Netherlands

FR: [startech.com/fr](http://startech.com/fr)  
DE: [startech.com/de](http://startech.com/de)  
ES: [startech.com/es](http://startech.com/es)  
NL: [startech.com/nl](http://startech.com/nl)  
IT: [startech.com/it](http://startech.com/it)  
JP: [startech.com/jp](http://startech.com/jp)