



1U AMD Opteron CPU Heatsink with Fan - Installation Guide

FANOPTIU


Prior to installation, remove all power to the computer, and open the computer case in order to allow easy access to both the top and bottom portions of the motherboard.

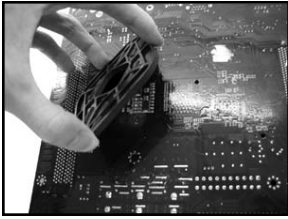


- 1** Place the base clip backing onto the backside of the mainboard, inserting the post screws through the holes provided by the motherboard.

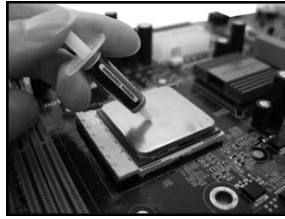


- 2** Apply enough thermal paste to the top of the CPU to cover the entire top surface.

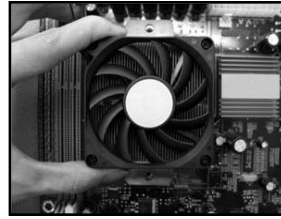

- 3** Align the Fan according to the screw posts provided by the base. Fasten the base of the unit to the surface of the CPU.

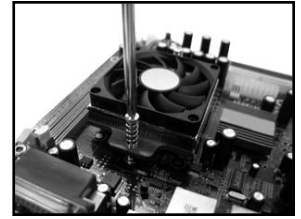

- 4** Lock the spring nut to the base clip backing.

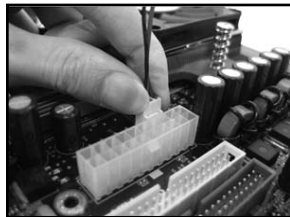

- 5** Connect the fan's power cable to the appropriate socket on the mainboard.



- 6** Installation is complete.