


Industrial RJ45 to Open SFP Mini PoE Media Converter | 1000 Mbps (1G) | 60W

Product Diagram (IMC1GSFP60W)

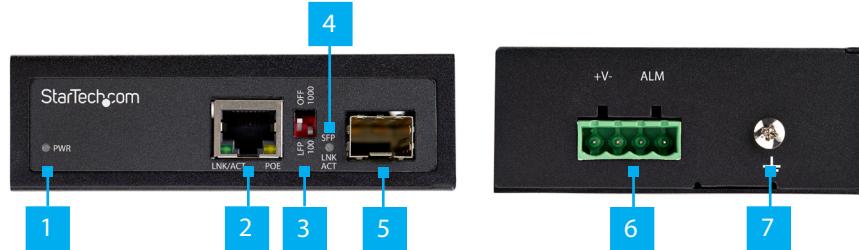

Component	Function
1 PWR LED	<ul style="list-style-type: none">Green: An external DC Power Source is detected.Off: An external DC Power Source is not detected.
2 RJ45 Port	<ul style="list-style-type: none">Connect a Network Device to the Media Converter.ON: A PoE Powered Device (PD) is detected.Flashing: The Media Converter is transmitting/receiving data.
3 DIP Switch	<p>DIP1- Link Fault Pass-through (LFP).</p> <ul style="list-style-type: none">Off: LFP Mode disabled.LFP: LFP Mode enabled. <p>DIP 2:</p> <ul style="list-style-type: none">Off: Sets SFP speeds to 1000Mbps (default)On: Sets SFP speeds to 100Mbps.
4 SFP LED	<ul style="list-style-type: none">Green: Indicates that a link is detected on the SFP.Flashing: Indicates that data is being transmitted or received.
5 SFP Slot	<ul style="list-style-type: none">Connect an SFP (100/1000BASE-X) to the Media Converter.
6 4-Pin Terminal Block	<ul style="list-style-type: none">Connect an external DC Power Source (48-56V DC Input) to the Media Converter.Connect an alarm or warning circuit to the relay (ALM) connection. The relay is triggered if the Media Converter loses power.

7	Ground Screw	<ul style="list-style-type: none">Connect a ground connection to the Ground Screw when connecting a DC Power Source to the Media Converter.
---	--------------	--

Requirements

For the latest requirements, please visit www.startech.com/IMC1GSFP60W

- Network Equipment (e.g. Router, Network Switch) x 1
- MSA-Compliant 100/1000BASE-X SFP Transceiver Module x 1
- RJ45 Terminated UTP/STP CAT5e (or better) Network Cable x 1
- Terminated Fiber Optic Cable (dependent on SFP Module) x 1
- DC Power Source x 1
- Small Flat Head Screwdriver x 1
- Phillips Head Screwdriver x 1
- Alarm or Warning Circuit x 1

Powering the Media Converter

Connecting and installing the **4-Wire Terminal Connector** must be completed by a licensed Electrician.

Notes: Make sure that you turn off the power source before connecting the power wire to the **Media Converter**.

Do not exceed the recommended power source voltage as it may result in personal or product damage.

- Using a **Small Flat Head Screwdriver**, loosen the two screws (+V-) on the **4-Wire Terminal Connector** (included).
- Connect the **Power Wires** from a **DC Power Source** (48 - 56V DC), or the provided **Barrel Power Connector Adapter** to the proper **Terminal Block Connectors** on the **Media Converter**. The terminals are marked on the **Media Converter's Casing** (connect the positive wire to V+ and the negative wire to V-).
- (Optional) Using a **Small Flat Head Screwdriver**, loosen the two screws (ALM) on the **4-Wire Terminal Connector**.
- (Optional) Connect the **Relay Wires** from an **Alarm** or **Warning Circuit** to the **2 ALM Relay Pins** on the **Terminal Block Connector**.
- Tighten the four screws on the **4-Wire Terminal Connector**.
- Insert the **4-Wire Terminal Connector** in the **4-Wire Terminal Block** on the **Media Converter**.

7. Using a **Phillips Head Screwdriver**, loosen the **Ground Screw** on the **Media Converter**.
8. Connect the **Ground Wire** from a **Earth Ground Connection** to the **Ground Screw** on the **Media Converter**.
9. Using the **Small Flat Head Screwdriver**, tighten the **Ground Screw** to secure the **Grounding Wire** to the **Media Converter**.

(Optional) Barrel Connector

- Connect a **Type N (OD: 5.5 mm, ID: 2.5 mm) Barrel Connector** from a **Universal Power Adapter** to the **Terminal Block to Barrel Power Connector Adapter**.

Connecting the Media Converter

1. Connect a **CAT5e/6 Cable** to the **RJ45 Port** on the **Media Converter** and the other end to an **RJ45 port** on a **Network Device**.
2. Insert an **MSA-Compliant SFP Transceiver Module** (sold separately) into the **SFP Slot** on the **Media Converter**.
3. Remove the **Dust Cover** from the **SFP Module** and connect the appropriate cable (CAT5e/6 or Fiber).

Mounting

DIN Rail Mounting

1. Align the **DIN Rail Brackets** (x 1) with the **Mounting Holes** (x 4) on the side of the **Media Converter**.
2. Insert the **Mounting Screws** (x 3) through the **DIN Rail Bracket** and into the **Media Converter**.
3. Using a **Phillips Head Screwdriver**, tighten the **Mounting Screws**. Be careful not to over-tighten the **Mounting Screws**.
4. Clip the **DIN Rail Bracket** onto a **DIN Rail**, securing the **Media Converter**.

Wall Mounting

It is recommended that you use **Wall Studs** when wall mounting the **Media Converter**.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device. If shielded interface cables are included with the product, or if additional components or accessories are designated for use with the installation, they must be used to ensure compliance with FCC regulations..

ISED Statement / Déclaration d'ISDE

CAN ICES-003(A) / NMB-003(A)

This Class A digital apparatus complies with Canadian ICES-003.

This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.


Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

1. Align the **Mounting Brackets** (x 2) with the **Mounting Holes** (x 4) on the side of the **Media Converter**.
2. Insert the **Mounting Screws** (x 4) through each of the **Mounting Brackets** and into the **Media Converter**.
3. Align the **Media Converter** on the wall in the position you want to mount the **Media Converter**.
4. Using a **Writing Utensil**, mark off both **Mounting Holes** on the **Media Converter**.
5. Using a **Level**, draw a line connecting the two **Mounting Holes**, making sure that the line is level.
6. Align the **Mounting Holes** on the **Media Converter** with the **Mounting Hole Marks**.
7. Insert the **Mounting Screws** (x 2) through the **Mounting Holes** on the **Media Converter** and into the **Wall**.
8. Using a **Phillips Head Screwdriver**, tighten the **Mounting Screws** until the **Media Converter** is securely fastened to the **Wall**.

Product Dimensions

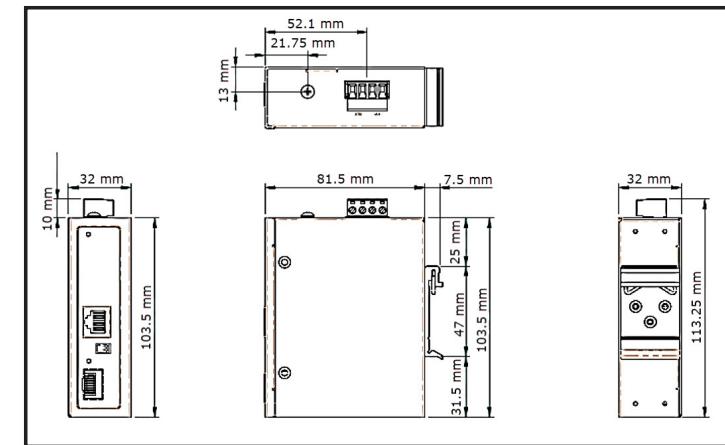

Points de collecte sur www.quefairedesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Warranty Information

This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

StarTech.com Ltd.

45 Artisans Cres
London, Ontario
N5V 5E9
Canada

StarTech.com LLP

2500 Creekside
Parkwy
Lockbourne, Ohio
43137
U.S.A.

StarTech.com Ltd.

Unit B, Pinnacle 15
Gowerton Rd,
Brackmills
Northampton
NN4 7BW
United Kingdom

FR: startech.com/fr
DE: startech.com/de
ES: startech.com/es
NL: startech.com/nl
IT: startech.com/it
JP: startech.com/jp